

Netgear AC800S Guide

 


This article gives you a general introduction to the router web interface.

Note: You have to access the [router web interface](#).

For new customers, you need to activate the SIM card online first by visiting our [activation page](#) before you can use the service.

In *Overview*, you can see general information about your router such as battery level, internet connection status and data usage.

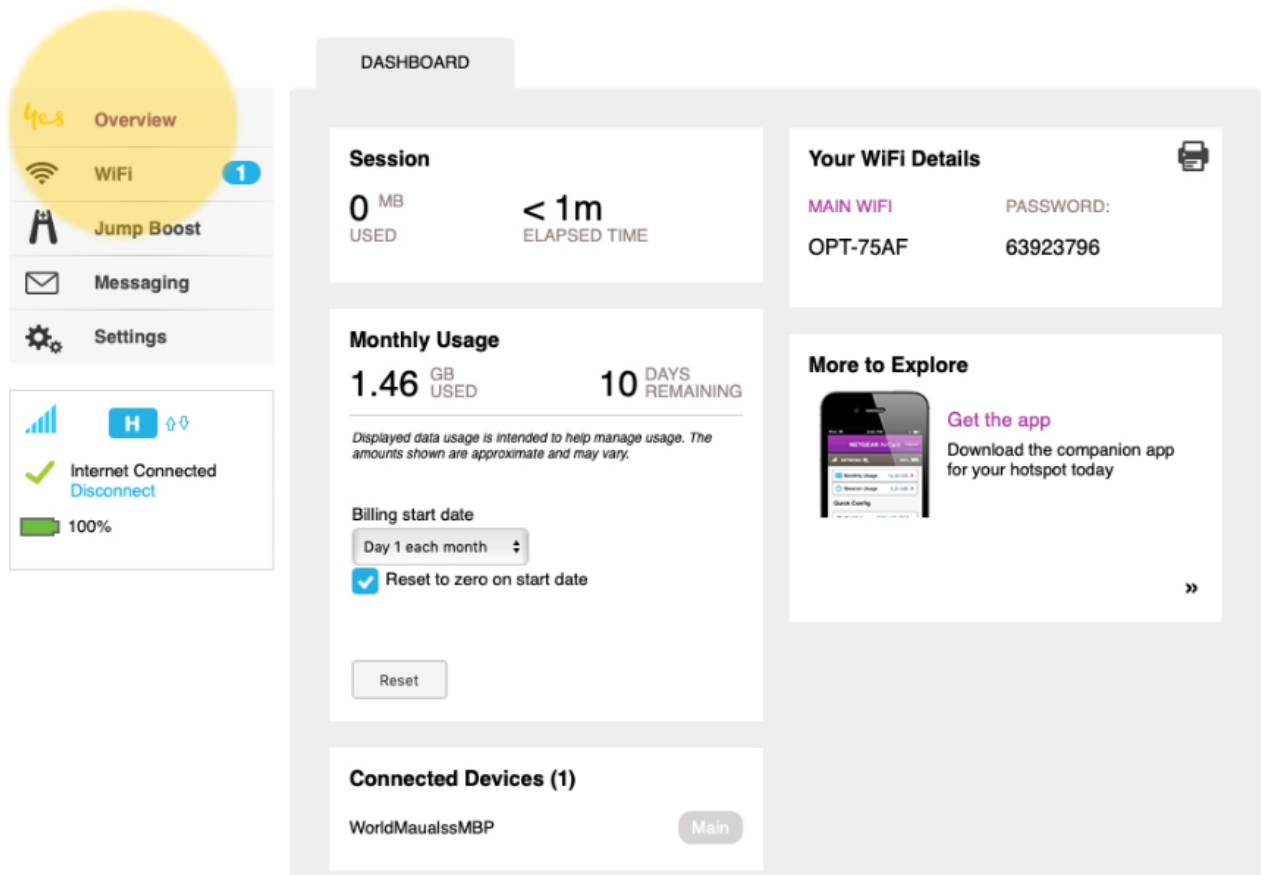

In *WiFi*, you can select WPS settings, change name and password for your Wi-Fi hotspot and more.

4es Overview
WIFI 1
Jump Boost
Messaging
Settings

Internet Connected
Disconnect
100%

CONNECT OPTIONS MAC FILTER

Disable WiFi

Main WiFi

This is your primary network. Devices on this network can communicate and share files or printers.

WIFI NAME:
OPT-75AF

WIFI PASSWORD:
63923796

 
 
WPS

Edit

Secondary WiFi

Guest WiFi creates a one-time, unique password for temporary visitors to access your WiFi hotspot.


In *Jump Boost*, you can see how to use your router to charge your mobile phone or tablet.

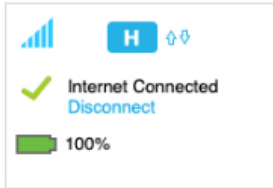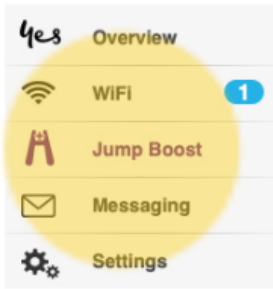


Jump Boost

If your tablet or smartphone is out of battery, you can give it some juice from your hotspot. Reminder: you can't charge while boosting.

 1. Connect the Jump Boost cable to the mobile hotspot's charging port. To ensure proper battery performance and charging, you must use the Jump Boost cable included in the box.

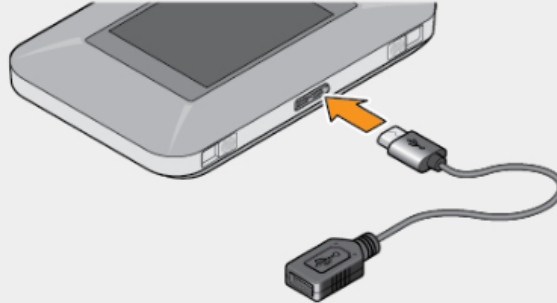


 2. Connect your smartphone's charging cable to the Jump Boost connector

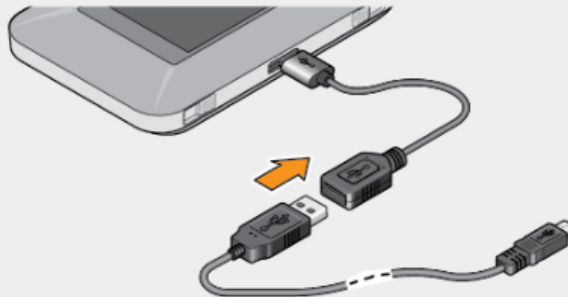


In *Messaging*, you can send and read SMS.

  Note: Your plan is intended for data use only and doesn't include an SMS allowance. Please review your [plan details](#) and Critical Information prior sending one for more details.

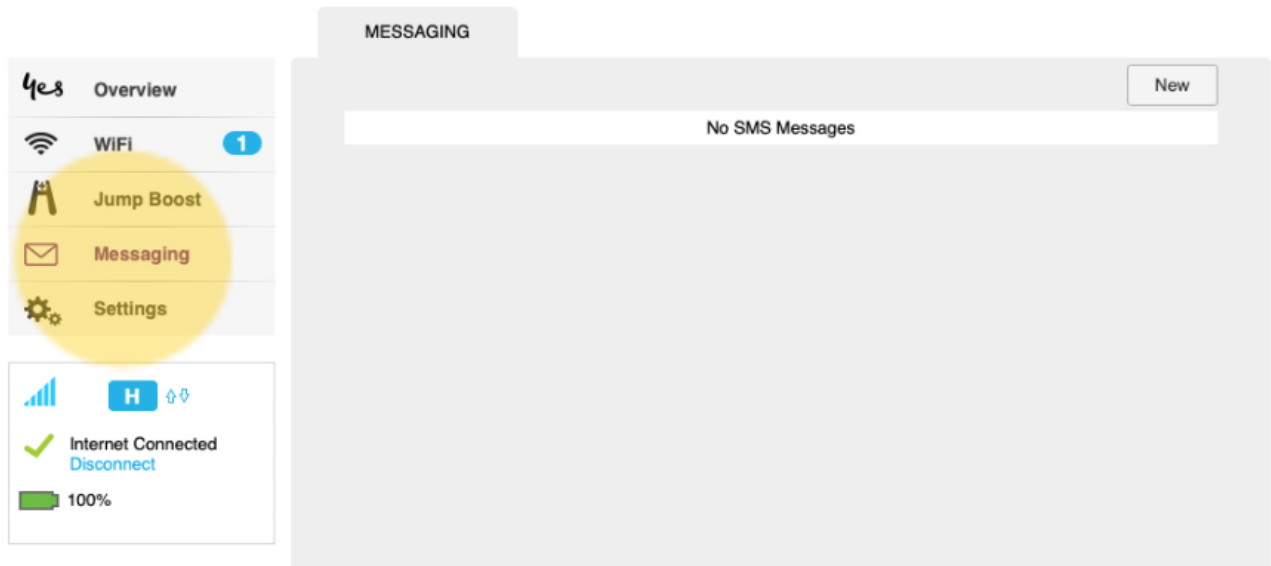



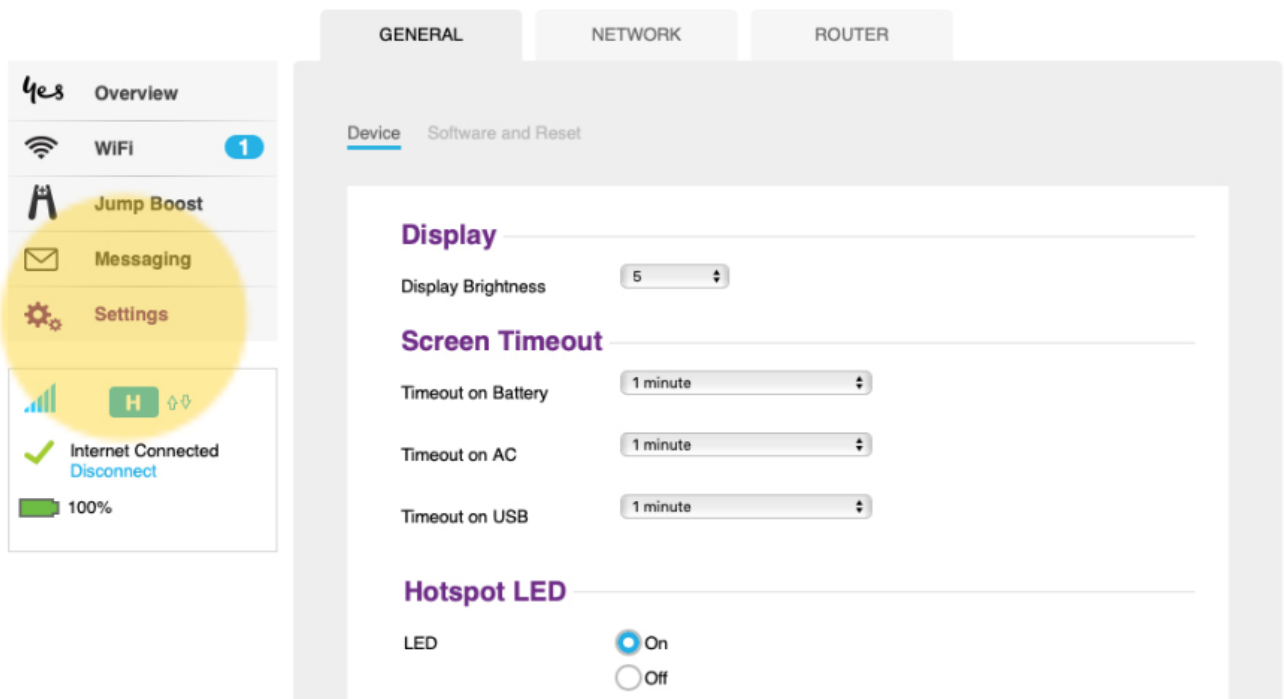




In *Settings*, you can select and edit various settings such as internet configuration, network settings and SIM PIN.





In *About*, you can see general information about your router such as software version and battery level.

ABOUT

-  Overview 1
-  WIFI 1
-  Jump Boost
-  Messaging
-  Settings

 Internet Connected
[Disconnect](#)

 100%

Account Details

IMEI:
IMEI SV: 07
IMSI: 238010154560583
FSN: 4WX281NE0014B
ICCID: 89450133130412070175

WiFi Details

MAC Address: 10-DA-43-5E-75-AF
WiFi Range: Medium

Main WiFi

Name: OPT-75AF
Password: 63923796
Encryption: WPA2_Personal_AES
Mode: M802_11_BGN
Band: 2.4 GHz
Bandwidth: 20 MHz

Device

Model: AirCard 800S
Optus AC800S Manager: <http://Optus.AC800S>
PRI Version: 23113346, 03.00
Power State: Online
Current temperature: 27°C
Current voltage: 4125mV
Battery charge level: 100%
Battery status: Normal
Battery temperature: 28°C

Firmware

Firmware Version: NTG9X40C_11.14.08.33
Firmware Build Date: 2018/03/16
App Version: NTG9X40C_11.14.08.33
Web App Version:

ABOUT




Yes Overview **1**

WiFi **1**


Jump Boost

Messaging

Settings

 Internet Connected
[Disconnect](#)

 100%

Account Details

IMEI:

IMEI SV: 07

IMSI: 238010154560583

FSN: 4WX281NE0014B

ICCID: 89450133130412070175

WiFi Details

MAC Address: 10-DA-43-5E-75-AF

WiFi Range: Medium

Main WiFi

Name: OPT-75AF

Password: 63923796

Encryption: WPA2_Personal_AES

Mode: M802_11_BGN

Band: 2.4 GHz

Bandwidth: 20 MHz

Device

Model: AirCard 800S

Optus AC800S Manager: <http://Optus.AC800S>

PRI Version: 23113346, 03.00

Power State: Online

Current temperature: 27°C

Current voltage: 4125mV

Battery charge level: 100%

Battery status: Normal

Battery temperature: 28°C

Firmware

Firmware Version: NTG9X40C_11.14.08.33

Firmware Build Date: 2018/03/16

App Version: NTG9X40C_11.14.08.33

Web App Version:

Online URL: <https://articles.spintel.net.au/article/netgear-ac800s-guide.html>