

Netgear AC800S Guide




This article gives you a general introduction to the router web interface.

Note: You have to access the [router web interface](#).

For new customers, you need to activate the SIM card online first by visiting our [activation page](#) before you can use the service.

In *Overview*, you can see general information about your router such as battery level, internet connection status and data usage.


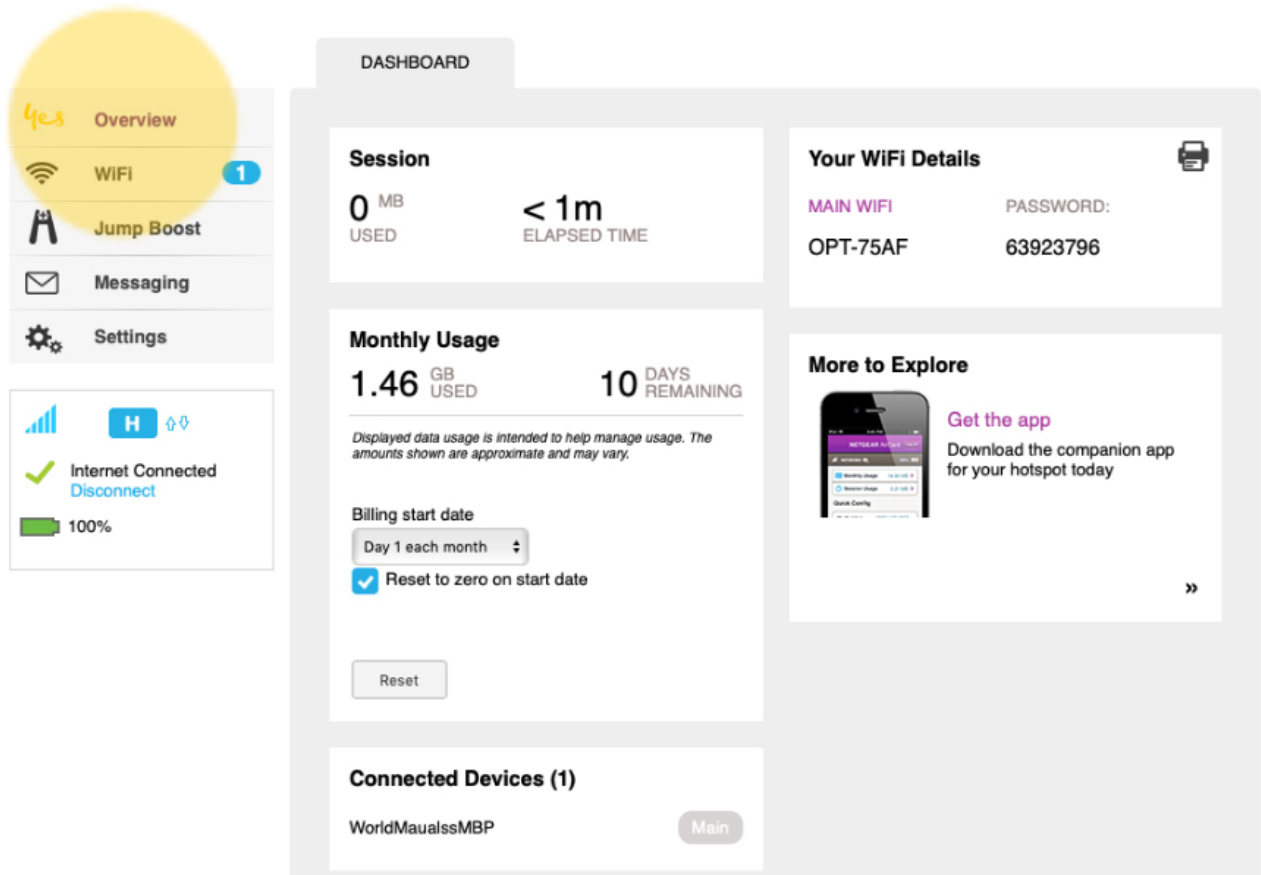


In *WiFi*, you can select WPS settings, change name and password for your Wi-Fi hotspot and more.

A vertical navigation menu for a mobile application. It features five main items: 'Overview' with a '4es' logo, 'WIFI' with a Wi-Fi icon and a blue notification bubble containing the number '1', 'Jump Boost' with a yellow lightning bolt icon, 'Messaging' with an envelope icon, and 'Settings' with a gear icon. Below these items is a status section showing a signal strength indicator, a blue 'H' icon with up/down arrows, a green checkmark, the text 'Internet Connected' and 'Disconnect', and a green battery icon with '100%'.

A screenshot of a router's web interface for configuring WiFi. At the top, there are three tabs: 'CONNECT', 'OPTIONS', and 'MAC FILTER'. A red 'Disable WiFi' button is located in the top right corner. The main content area is divided into two columns. The left column is titled 'Main WiFi' and contains the text: 'This is your primary network. Devices on this network can communicate and share files or printers.' Below this, it shows 'WIFI NAME: OPT-75AF' and 'WIFI PASSWORD: 63923796'. There is a 'WPS' button and an 'Edit' button at the bottom of this section. The right column is titled 'Secondary WiFi' and contains the text: 'Guest WiFi creates a one-time, unique password for temporary visitors to access your WiFi hotspot.'


In *Jump Boost*, you can see how to use your router to charge your mobile phone or tablet.

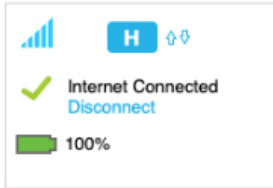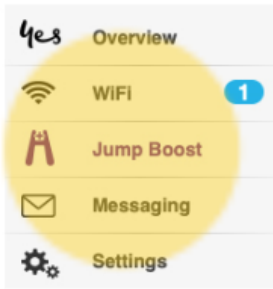


Jump Boost

If your tablet or smartphone is out of battery, you can give it some juice from your hotspot. Reminder: you can't charge while boosting.

1. Connect the Jump Boost cable to the mobile hotspot's charging port. To ensure proper battery performance and charging, you must use the Jump Boost cable included in the box.

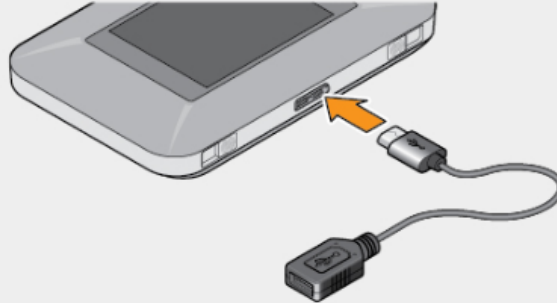


2. Connect your smartphone's charging cable to the Jump Boost connector

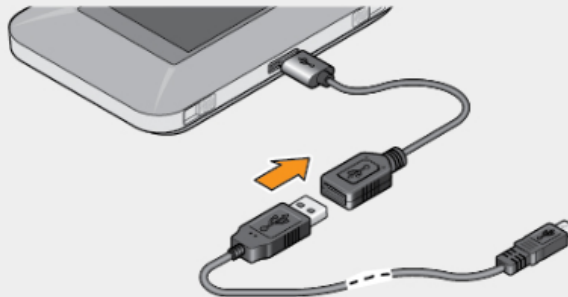


In *Messaging*, you can send and read SMS.

Note: Your plan is intended for data use only and doesn't include an SMS allowance. Please review your [plan details](#) and Critical Information prior sending one for more details.

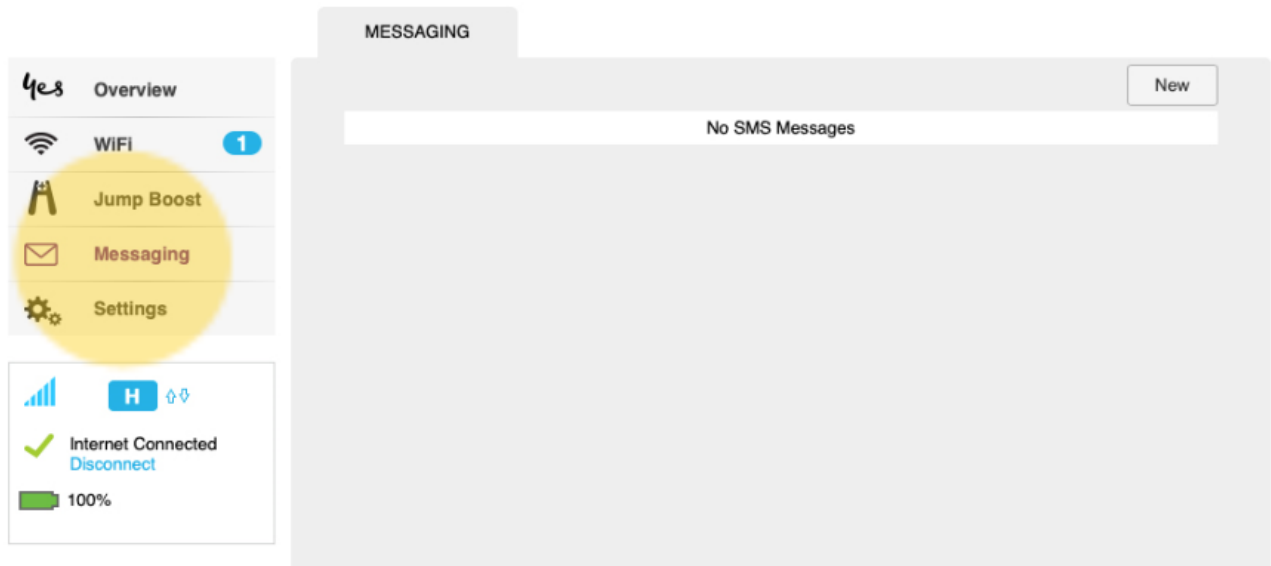

In *Settings*, you can select and edit various settings such as internet configuration, network settings and SIM PIN.

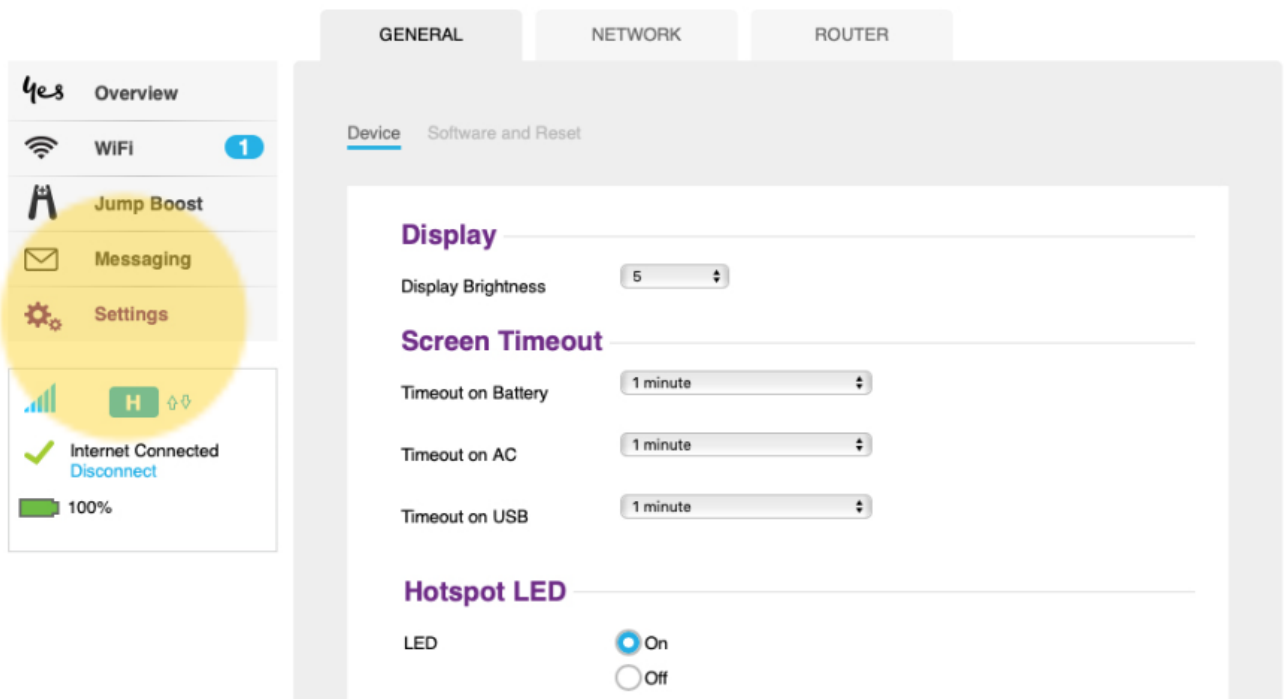

In *About*, you can see general information about your router such as software version and battery level.

ABOUT

- Overview 1
- WIFI 1
- Jump Boost
- Messaging
- Settings

Internet Connected
[Disconnect](#)

100%

Account Details

IMEI:
IMEI SV: 07
IMSI: 238010154560583
FSN: 4WX281NE0014B
ICCID: 89450133130412070175

WiFi Details

MAC Address: 10-DA-43-5E-75-AF
WiFi Range: Medium

Main WiFi

Name: OPT-75AF
Password: 63923796
Encryption: WPA2_Personal_AES
Mode: M802_11_BGN
Band: 2.4 GHz
Bandwidth: 20 MHz

Device

Model: AirCard 800S
Optus AC800S Manager: <http://Optus.AC800S>
PRI Version: 23113346, 03.00
Power State: Online
Current temperature: 27°C
Current voltage: 4125mV
Battery charge level: 100%
Battery status: Normal
Battery temperature: 28°C

Firmware

Firmware Version: NTG9X40C_11.14.08.33
Firmware Build Date: 2018/03/16
App Version: NTG9X40C_11.14.08.33
Web App Version:

Online URL: <https://articles.spintel.net.au/article/netgear-ac800s-guide.html>