
## **Netgear AC800S Guide**

This article gives you a general introduction to the router web interface.


Note: You have to access the router web interface.

For new customers, you need to activate the SIM card online first by visiting our <u>activation page</u> before you can use the service.


In *Overview*, you can see general information about your router such as battery level, internet connection status and data usage.

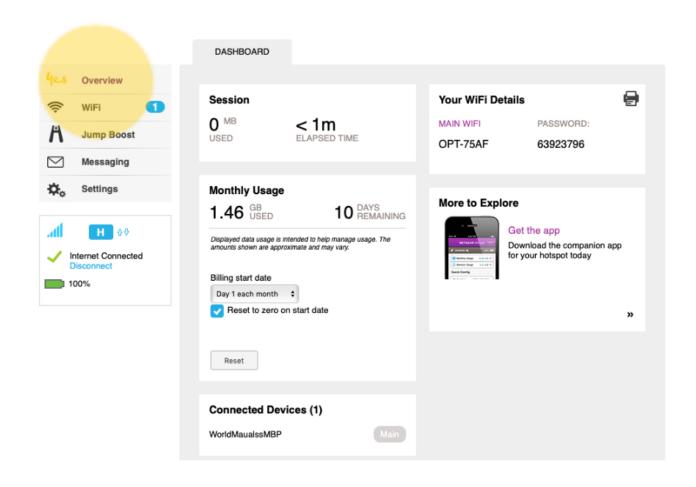

In *WiFi*, you can select WPS settings, <u>change name and password</u> for your Wi-Fi hotspot and more.

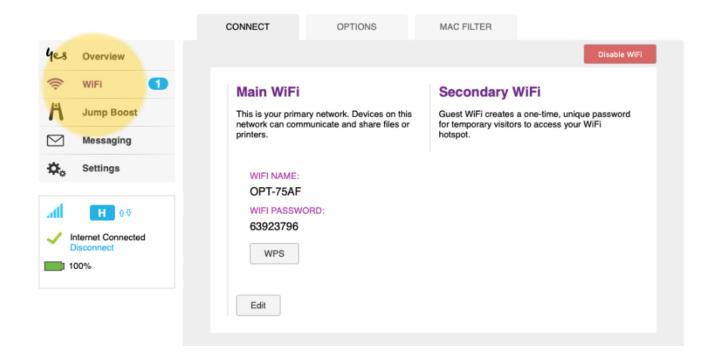


In *Jump Boost*, you can see how to use your router to charge your mobile phone or tablet.

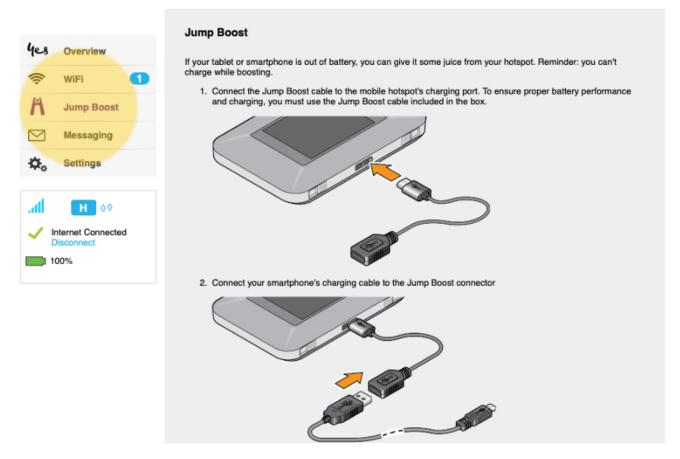


In *Messaging*, you can send and read SMS.


Note: Your plan is intended for data use only and doesn't include an SMS allowance. Please review your plan details and Critical Information prior sending one for more details.

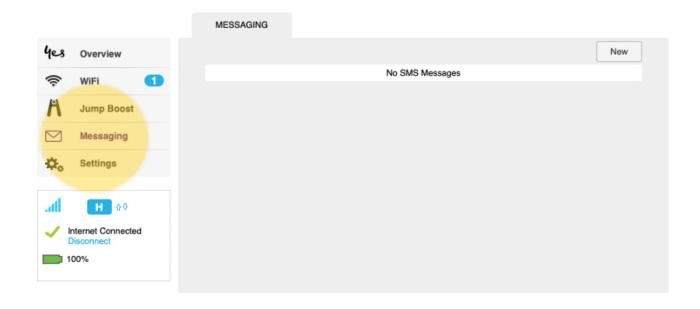

In *Settings*, you can select and edit various settings such as <u>internet</u> <u>configuration</u>, network settings and <u>SIM PIN</u>.

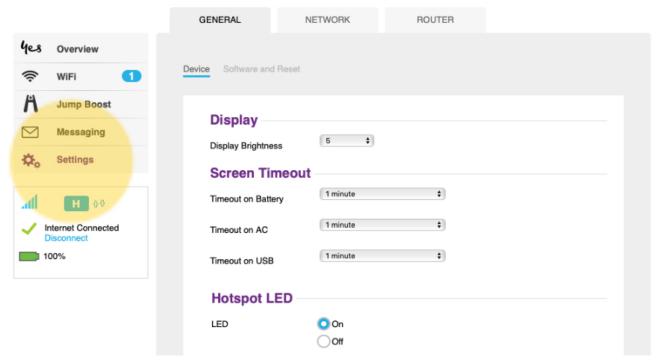

In *About*, you can see general information about your router such as software version and battery level.

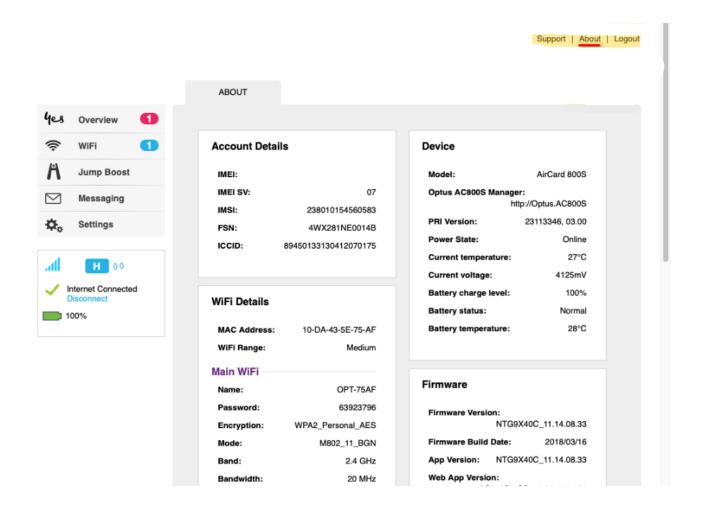

Online URL: https://articles.spintel.net.au/article/netgear-ac800s-guide.html