

# Netgear AC800S Guide




This article gives you a general introduction to the router web interface.

*Note: You have to access the [router web interface](#).*

For new customers, you need to activate the SIM card online first by visiting our [activation page](#) before you can use the service.

In *Overview*, you can see general information about your router such as battery level, internet connection status and data usage.

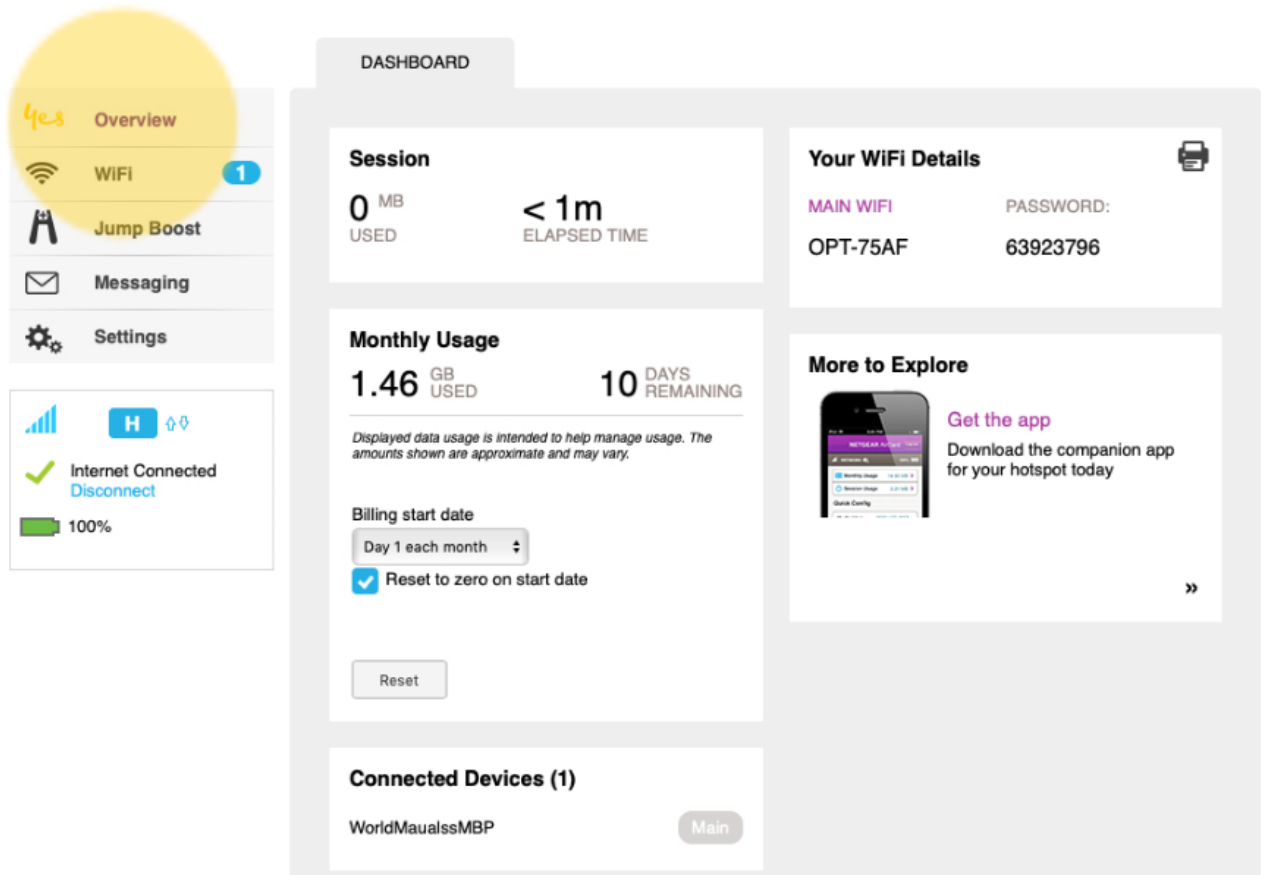

In *WiFi*, you can select WPS settings, change name and password for your Wi-Fi hotspot and more.

4es Overview  
WIFI 1  
Jump Boost  
Messaging  
Settings

Internet Connected  
Disconnect  
100%

CONNECT OPTIONS MAC FILTER

Disable WiFi

### Main WiFi

This is your primary network. Devices on this network can communicate and share files or printers.

WIFI NAME:  
OPT-75AF

WIFI PASSWORD:  
63923796



WPS

Edit

### Secondary WiFi

Guest WiFi creates a one-time, unique password for temporary visitors to access your WiFi hotspot.


In *Jump Boost*, you can see how to use your router to charge your mobile phone or tablet.

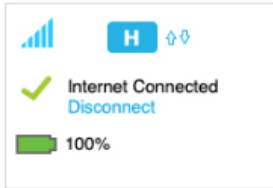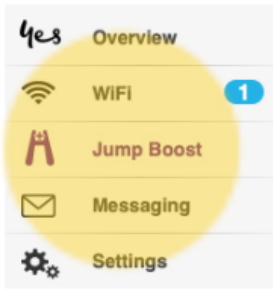


## Jump Boost

If your tablet or smartphone is out of battery, you can give it some juice from your hotspot. Reminder: you can't charge while boosting.

1. Connect the Jump Boost cable to the mobile hotspot's charging port. To ensure proper battery performance and charging, you must use the Jump Boost cable included in the box.

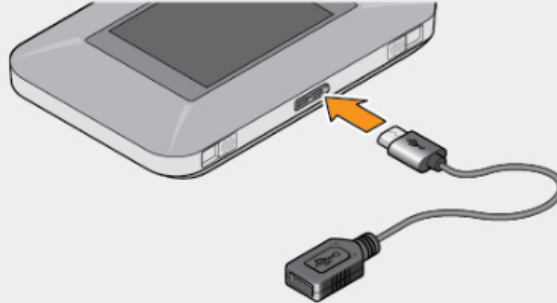


2. Connect your smartphone's charging cable to the Jump Boost connector

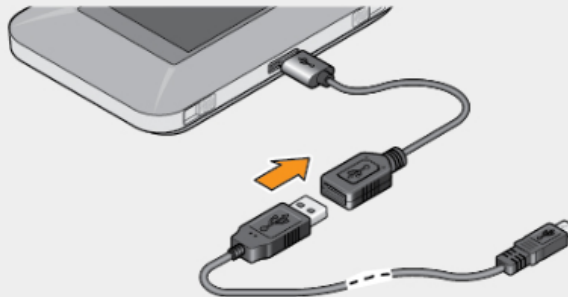


In *Messaging*, you can send and read SMS.

*Note: Your plan is intended for data use only and doesn't include an SMS allowance. Please review your [plan details](#) and Critical Information prior sending one for more details.*

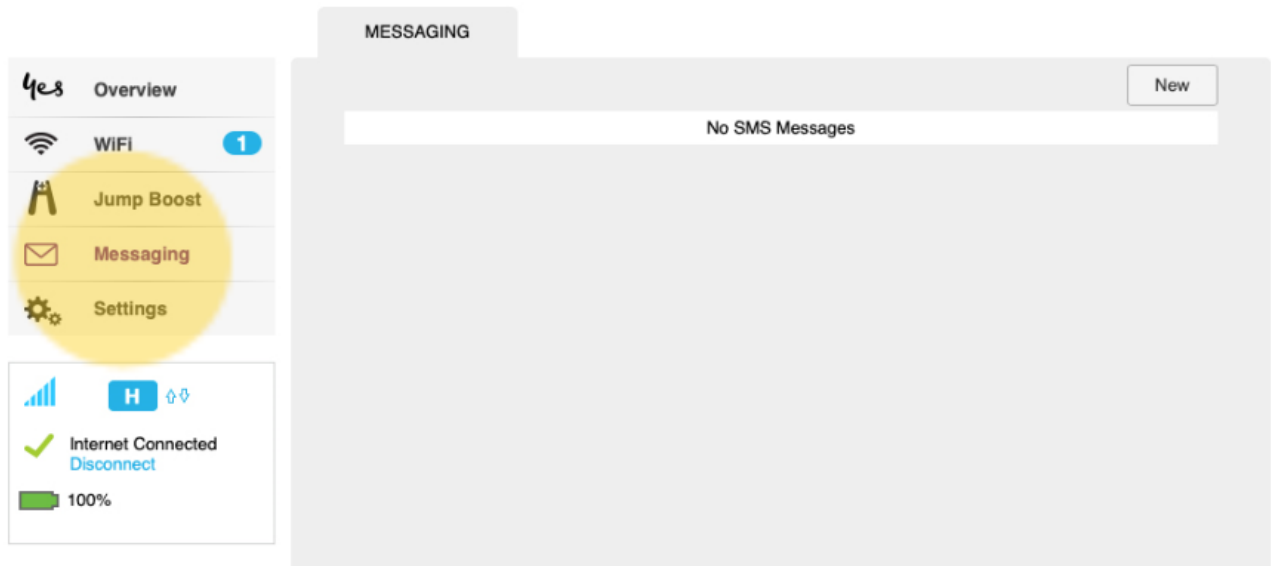



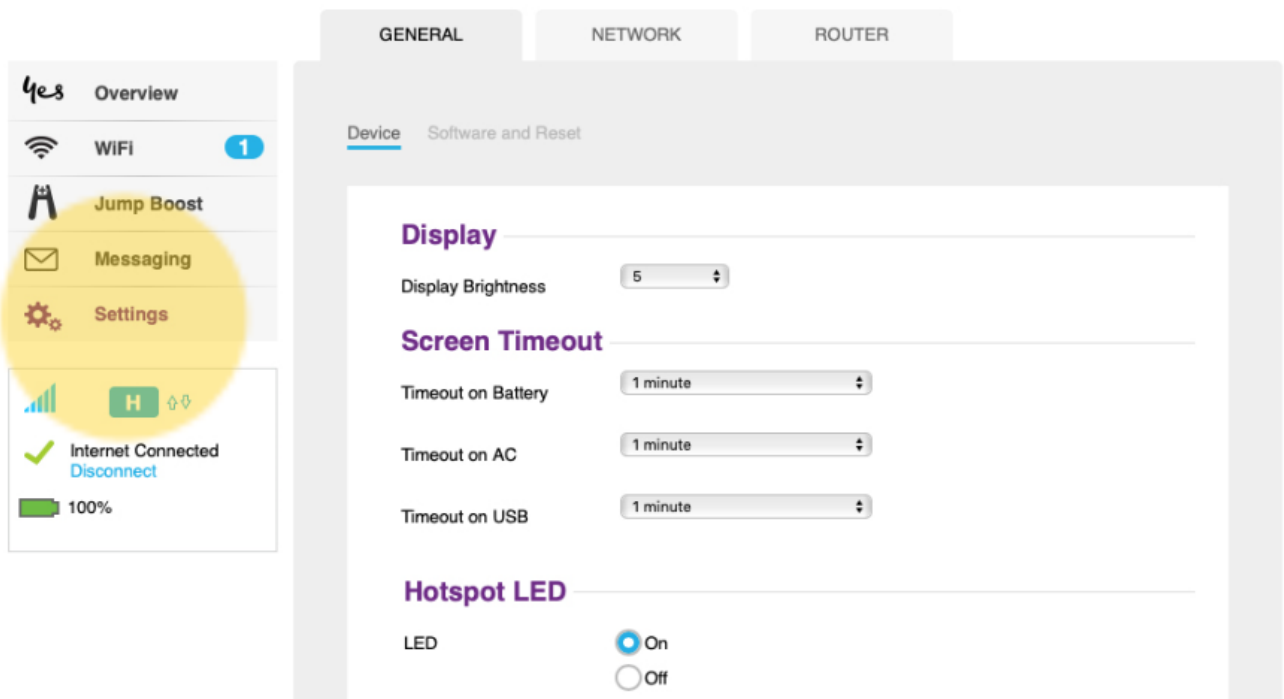





In *Settings*, you can select and edit various settings such as internet configuration, network settings and SIM PIN.





In *About*, you can see general information about your router such as software version and battery level.

ABOUT

-  Overview 1
-  WIFI 1
-  Jump Boost
-  Messaging
-  Settings

 Internet Connected  
[Disconnect](#)

 100%

### Account Details

**IMEI:**  
**IMEI SV:** 07  
**IMSI:** 238010154560583  
**FSN:** 4WX281NE0014B  
**ICCID:** 89450133130412070175

### WiFi Details

**MAC Address:** 10-DA-43-5E-75-AF  
**WiFi Range:** Medium

### Main WiFi

**Name:** OPT-75AF  
**Password:** 63923796  
**Encryption:** WPA2\_Personal\_AES  
**Mode:** M802\_11\_BGN  
**Band:** 2.4 GHz  
**Bandwidth:** 20 MHz

### Device

**Model:** AirCard 800S  
**Optus AC800S Manager:** <http://Optus.AC800S>  
**PRI Version:** 23113346, 03.00  
**Power State:** Online  
**Current temperature:** 27°C  
**Current voltage:** 4125mV  
**Battery charge level:** 100%  
**Battery status:** Normal  
**Battery temperature:** 28°C

### Firmware

**Firmware Version:** NTG9X40C\_11.14.08.33  
**Firmware Build Date:** 2018/03/16  
**App Version:** NTG9X40C\_11.14.08.33  
**Web App Version:**

Online URL: <https://articles.spintel.net.au/article/netgear-ac800s-guide.html>