


Netgear AC800S Guide

This article gives you a general introduction to the router web interface.

Note: You have to access the router web interface.


For new customers, you need to activate the SIM card online first by visiting our activation page before you can use the service.

In ***Overview***, you can see general information about your router such as battery level, internet connection status and data usage.

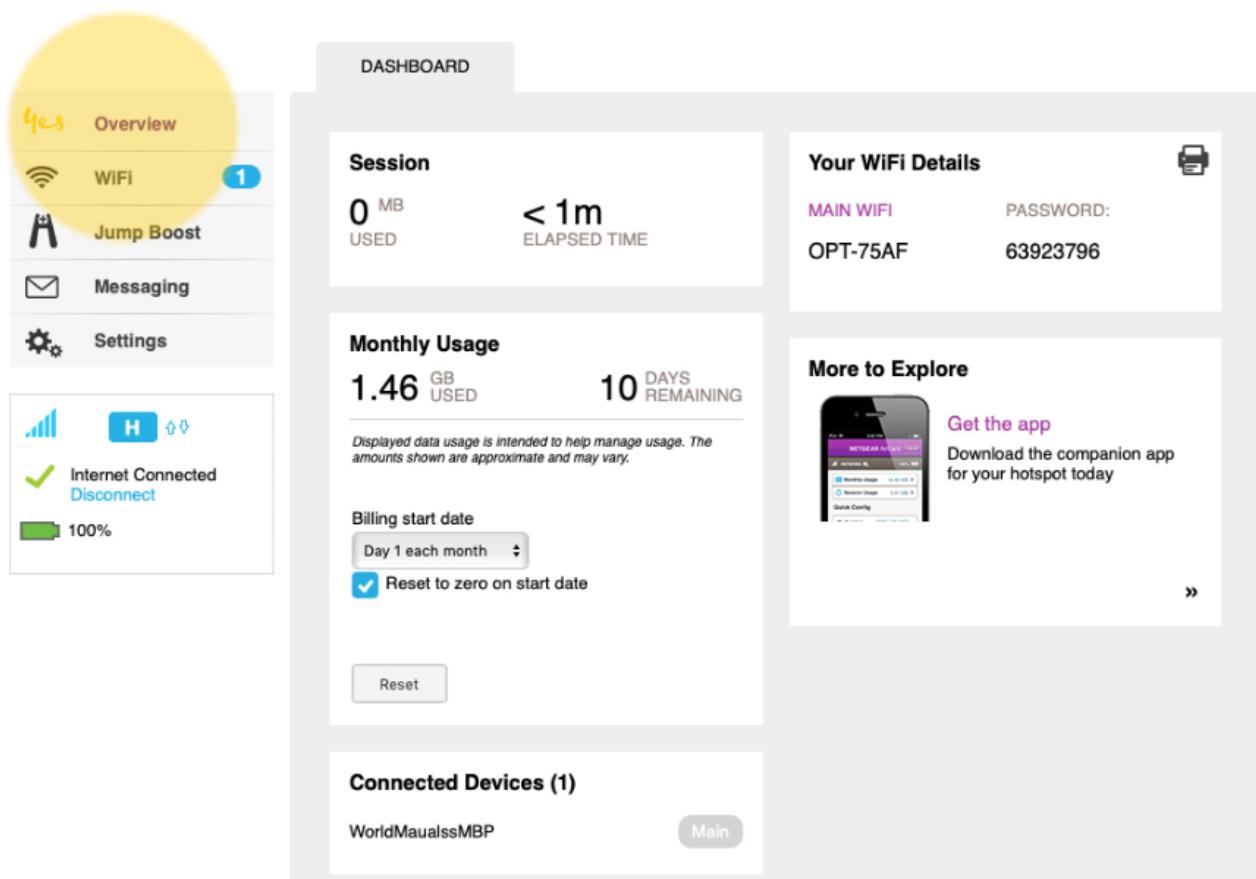


The screenshot shows the WiFi app interface. At the top left, there is a yellow circular badge with the text 'Yes' and a 'Overview' button. The main dashboard shows session details: 0 MB used and < 1m elapsed time. It also displays monthly usage of 1.46 GB used with 10 days remaining. A note states: 'Displayed data usage is intended to help manage usage. The amounts shown are approximate and may vary.' Below this, there is a 'Billing start date' section with a dropdown set to 'Day 1 each month' and a checked 'Reset to zero on start date' option. A 'Reset' button is also present. On the right side, there is a 'Your WiFi Details' section showing the main WiFi name as OPT-75AF and the password as 63923796. Below this, there is a 'More to Explore' section with a 'Get the app' button and a link to download the companion app for your hotspot today. At the bottom, there is a 'Connected Devices (1)' section showing a device named 'WorldMaualssMBP' with a 'Main' button.

In WiFi, you can select WPS settings, change name and password for your WiFi hotspot and more.

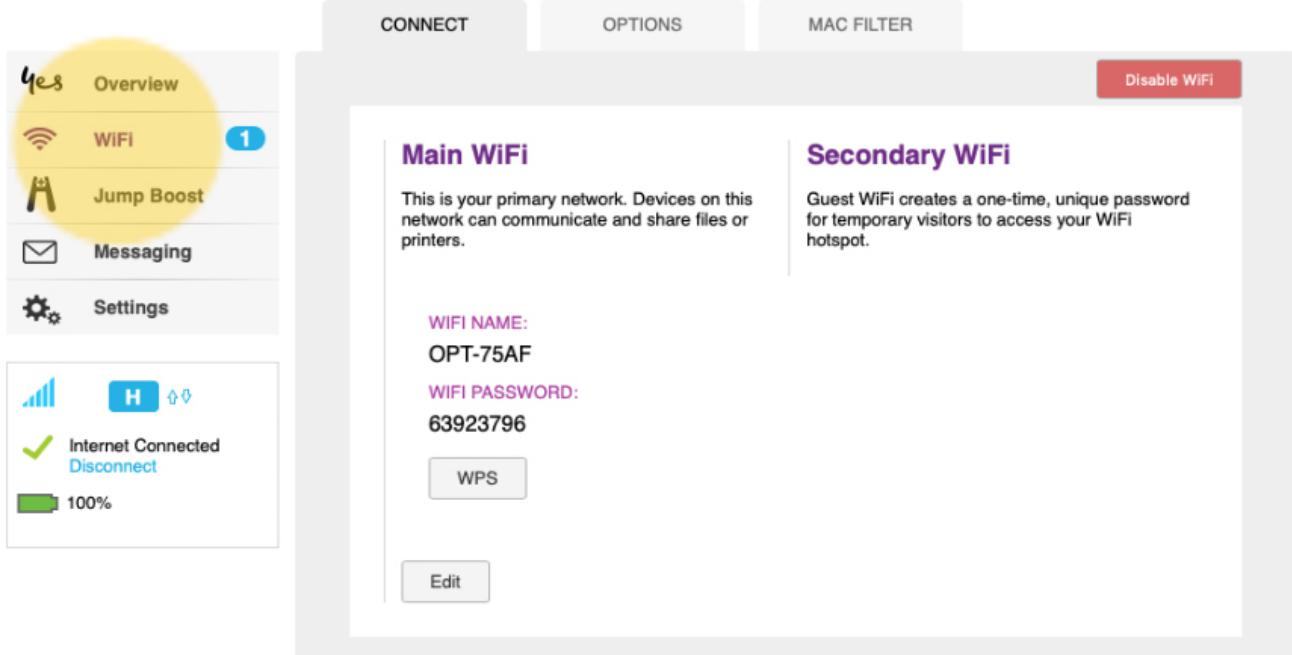


In *Jump Boost*, you can see how to use your router to charge your mobile phone or tablet.

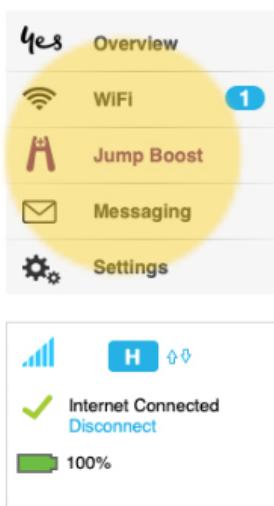


Jump Boost

If your tablet or smartphone is out of battery, you can give it some juice from your hotspot. Reminder: you can't charge while boosting.

1. Connect the Jump Boost cable to the mobile hotspot's charging port. To ensure proper battery performance and charging, you must use the Jump Boost cable included in the box.

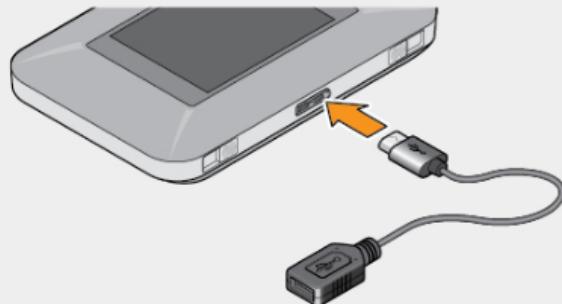


2. Connect your smartphone's charging cable to the Jump Boost connector

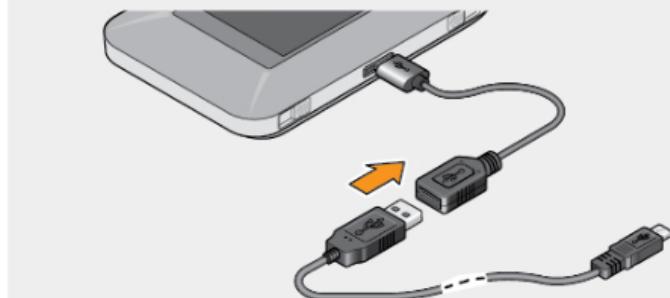


In *Messaging*, you can send and read SMS.

Note: Your plan is intended for data use only and doesn't include an SMS allowance. Please review your [plan details](#) and Critical Information prior sending one for more details.

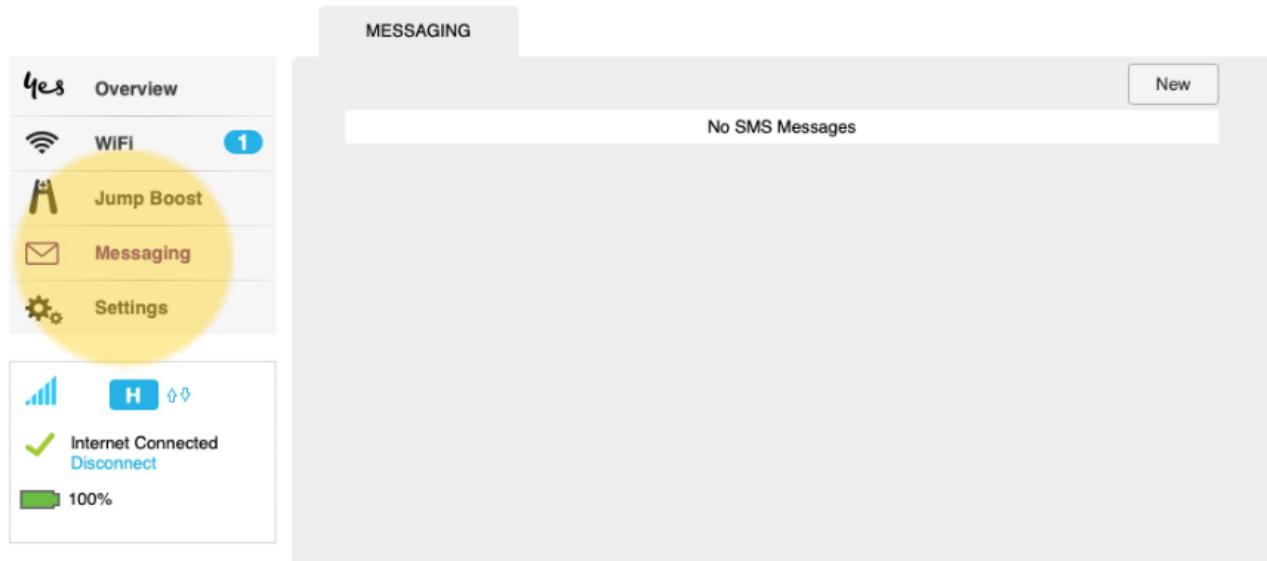

In **Settings**, you can select and edit various settings such as internet configuration, network settings and SIM PIN.

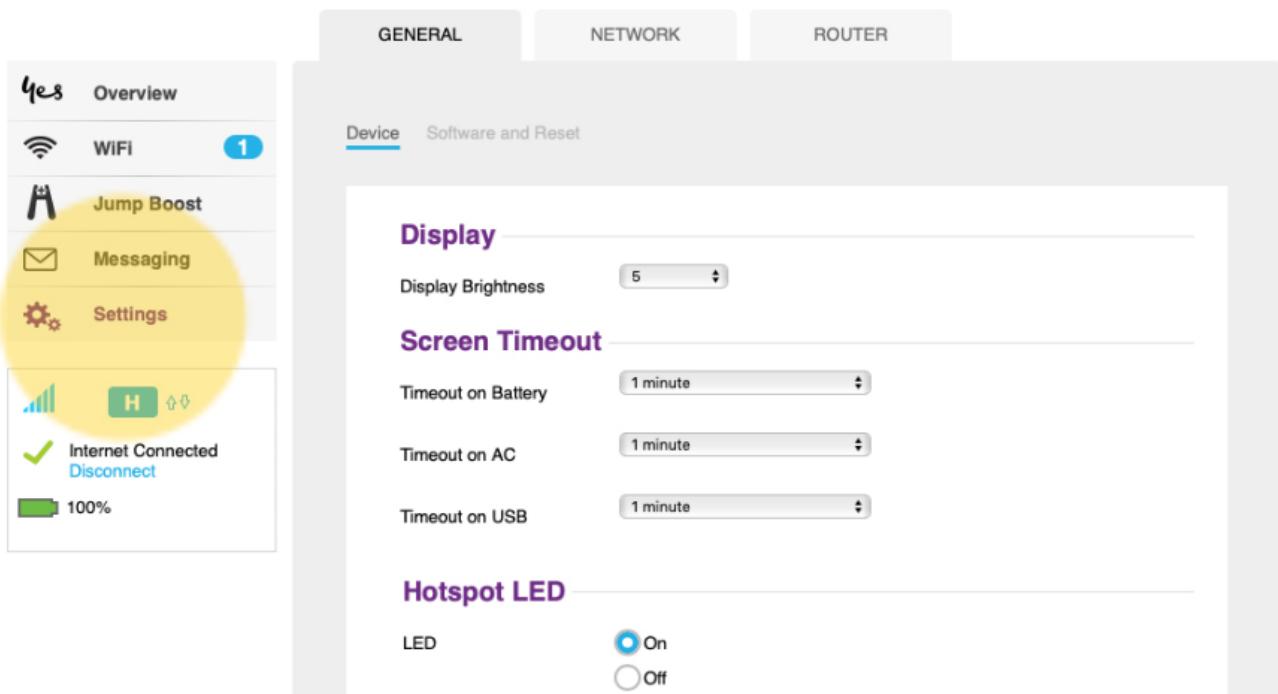

In **About**, you can see general information about your router such as software version and battery level.

ABOUT

4g Overview 1

WiFi WiFi 1

Jump Boost

Messaging

Settings

Internet Connected Disconnect

100%

Account Details

IMEI:	
IMEI SV:	07
IMSI:	238010154560583
FSN:	4WX281NE0014B
ICCID:	89450133130412070175

Device

Model:	AirCard 800S
Optus AC800S Manager:	http://Optus.AC800S
PRI Version:	23113346, 03.00
Power State:	Online
Current temperature:	27°C
Current voltage:	4125mV
Battery charge level:	100%
Battery status:	Normal
Battery temperature:	28°C

WiFi Details

MAC Address:	10-DA-43-5E-75-AF
WiFi Range:	Medium

Main WiFi

Name:	OPT-75AF
Password:	63923796
Encryption:	WPA2_Personal_AES
Mode:	M802_11_BGN
Band:	2.4 GHz
Bandwidth:	20 MHz

Firmware

Firmware Version:	NTG9X40C_11.14.08.33
Firmware Build Date:	2018/03/16
App Version:	NTG9X40C_11.14.08.33
Web App Version:	1.0.0

Online URL: <https://articles.spintel.net.au/article/netgear-ac800s-guide.html>