

How to Access Netgear AC800S Gateway

If you want to change modem settings, you need to establish a connection to the router web interface.

To access the modem gateway enter <http://Optus.AC800S> in the address bar of a web browser.

Enter your password, then Sign In. The default password is **password**.

Your hotspot portal displays.

The screenshot displays the Netgear AC800S Gateway dashboard. At the top, the word "DASHBOARD" is centered. On the left, there is a navigation menu with the following items: "Yes Overview" (with a red notification bubble containing the number 2), "WIFI" (with a blue notification bubble containing the number 1), "Jump Boost", "Messaging", and "Settings". Below the menu is a status section showing "Searching", "Internet Disconnected" (with a red 'X' icon), and "100%" battery level. The main content area features a "Sign In" form with a text input field, a "Sign In" button, and a "Remember me" checkbox. Below the sign-in form is an "Alerts (2)" section with a yellow header, containing two alerts: "SIM PIN Locked" (with a sub-message "Your SIM has security enabled." and a blue link "Enter PIN") and "Mobile Broadband Disconnected". Further down is a "Session" section showing "Not connected". At the bottom, the "Monthly Usage" section displays "0 MB USED" and "0 DAYS REMAINING". On the right side of the dashboard, there is a "More to Explore" section with a smartphone image and the text "Get the app" and "Download the companion app for your hotspot today".

Online URL:

<https://articles.spintel.net.au/article/how-to-access-netgear-ac800s-gateway.html>