

# How to Access Netgear AC800S Gateway




If you want to change modem settings, you need to establish a connection to the router web interface.

To access the modem gateway enter <http://Optus.AC800S> in the address bar of a web browser.

Enter your password, then Sign In. The default password is **password**.

Your hotspot portal displays.

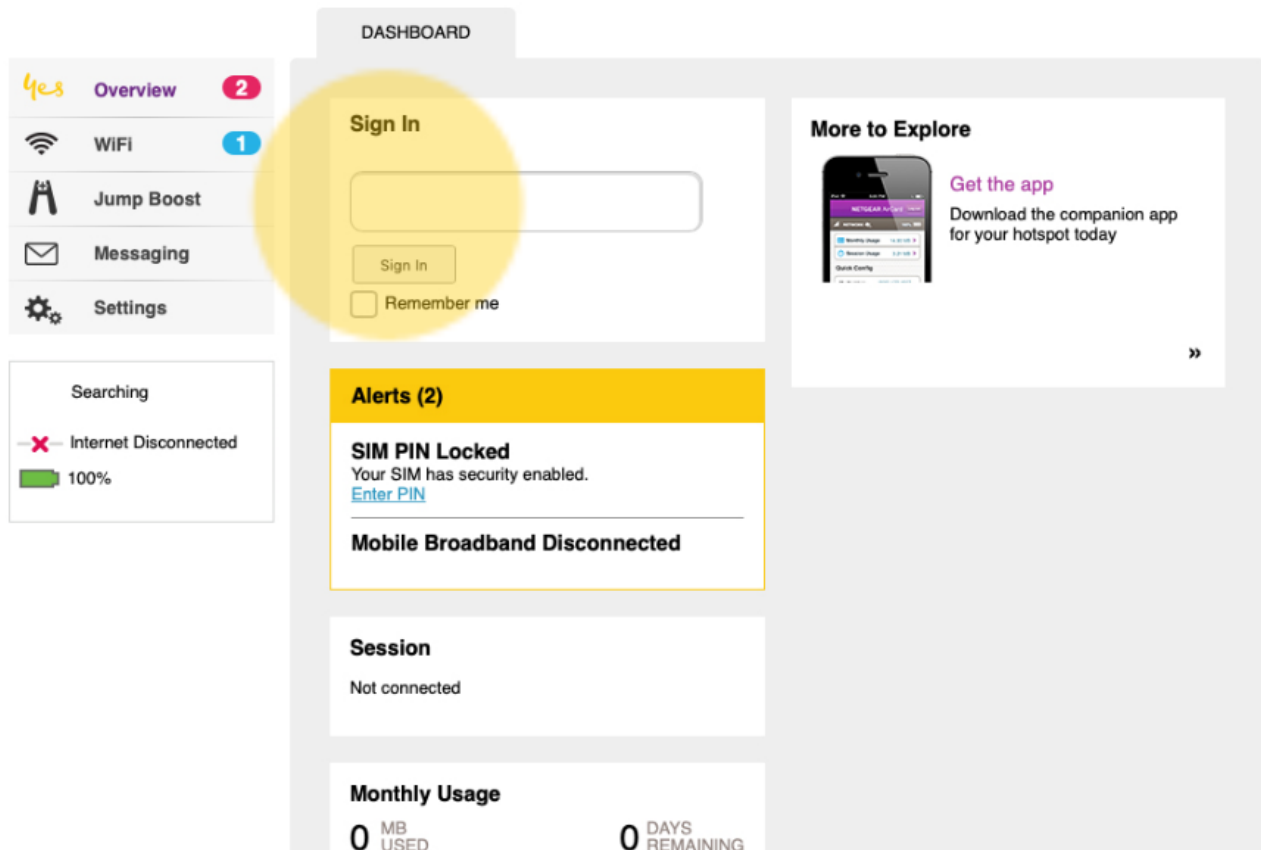

Online URL:

<https://articles.spintel.net.au/article/how-to-access-netgear-ac800s-gateway.html>