Internet settings for wireless broadband

Note: For new customers, you need to activate the SIM card online first by visiting our <u>activation page</u> before you can use the service.

For Netcomm NL1901

Login to modem gateway settings at http://192.168.20.1 and set it up under Advance Setup > Mobile Broadband > Edit/Add with the information below:

Authentication Method: AUTO

APN: OWHWBB Dial Number: *99# Net Select: LTE

Dial Delay (in sec): 10

Default WAN Connection Select: Mobile Broadband

You may click <u>here</u> for more information about this setup.

For Huawei B525

- In a web browser, enter the URL http://192.168.8.1/html
- Go to Settings then Network Settings


Preferred Mode: 4G only

If 2300 MHz is available in your area, you may select **4G with 2300** to maximise the service.

Click <u>here</u> for further troubleshooting steps for your Home Wireless broadband service.

Huawei B628

- In a web browser enter the URL http://192.168.8.1/html
- Go to Network Settings > Mobile Network Searching

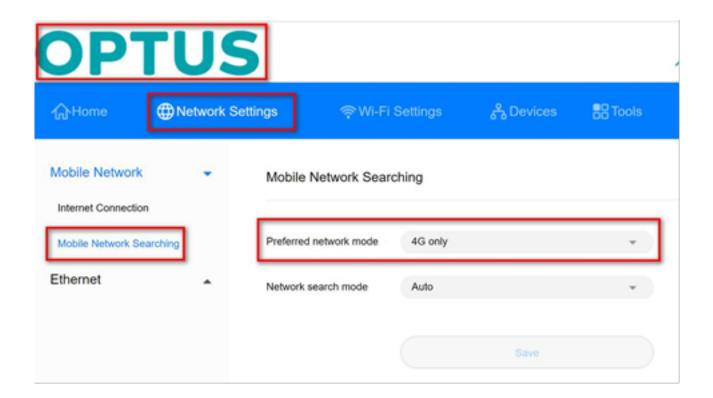

Online URL:

https://articles.spintel.net.au/article/internet-settings-for-wireless-broadband.html