

Internet settings for wireless broadband

Note: For new customers, you need to activate the SIM card online first by visiting our [activation page](#) before you can use the service.

For Netcomm NL1901

Login to modem gateway settings at <http://192.168.20.1> and set it up under **Advance Setup > Mobile Broadband > Edit/Add** with the information below:

Authentication Method: AUTO

APN: OWHWBB

Dial Number: *99#

Net Select: LTE

Dial Delay (in sec): 10

Default WAN Connection Select: Mobile Broadband

You may click [here](#) for more information about this setup.

For Huawei B525

- In a web browser, enter the URL <http://192.168.8.1/html>
- Go to **Settings** then **Network Settings**


Preferred Mode: 4G only

If 2300 MHz is available in your area, you may select **4G with 2300** to maximise the service.

Click [here](#) for further troubleshooting steps for your Home Wireless broadband service.

Huawei B628

- In a web browser enter the URL <http://192.168.8.1/html>
- Go to **Network Settings > Mobile Network Searching**

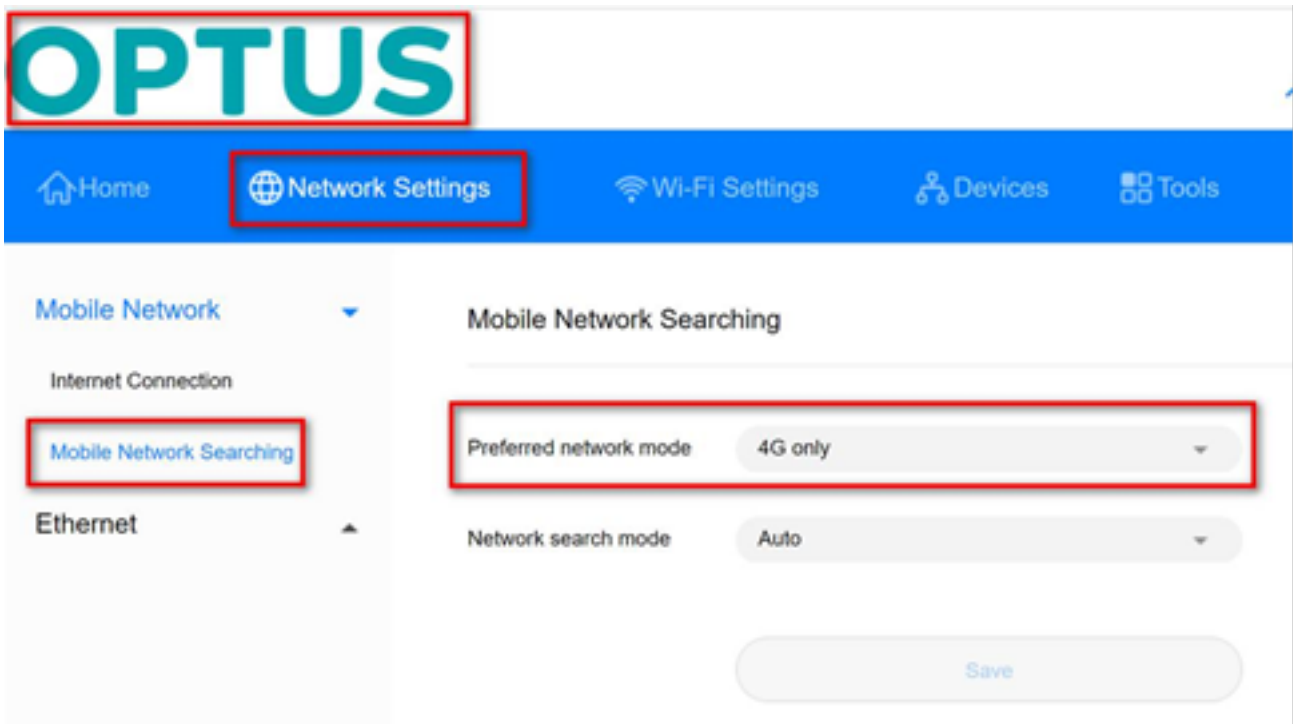

OPTUS

Home

Network Settings

Wi-Fi Settings

Devices

Tools

Mobile Network

Internet Connection

Mobile Network Searching

Ethernet

Mobile Network Searching

Preferred network mode 4G only

Network search mode Auto

Save

Online URL:

<https://articles.spintel.net.au/article/internet-settings-for-wireless-broadband.html>