Configuring D-Link Modem for SpinTel NBN

How do you know if your D-Link modem is compatible with nbn?

There are 2 different types of ports you need to check whether your modem is compatible with the type of nbn service that you have on your premise.

1. DSL port - often grey in colour, uses RJ11 cable. This is the same as the old telephone cable you would use to plug your home phone into the wall socket.



2. WAN port - Also known as the internet port that uses RJ-45 Ethernet cable to connect your D-link modem to the nbn connection device.



Some modems have both of these ports, and some only have one. To identify which port is required for

your nbn type of service, check the table below.

NBN type	Modem connection type	Authentication
Fibre to the Premise	Router/WAN connection	IPOE/Dynamic/DHCP/Auton
Fixed Wireless	Router/WAN connection	IPOE/Dynamic/DHCP/Auton
Hybrid Fibre Coaxial	Router/WAN connection	IPOE/Dynamic/DHCP/Auton
Fibre to the Curb	Router/WAN connection	IPOE/Dynamic/DHCP/Auton
Fibre to the Node	VDSL Modem required	IPOE/Dynamic/DHCP/Auton
Fibre to the Basement	VDSL Modem required	IPOE/Dynamic/DHCP/Auton

How Do You Set up Your D-Link Modem?

- 1. If there is **no NBN Connection Box** installed, connect the DSL port on the back of your D-Link modem to your phone wall socket using a phone cable.
- 2. If **there is an NBN Connection Box** installed, connect to the WAN/Internet port on the back of your modem to your NBN Connection Box.
- 3. Connect any of the LAN ports on the back of your modem to your PC (optional)
- 4. Plug the NBN connection box, if there's any, to the power socket
- 5. Connect the power port on the back of your modem to your power socket.
- 6. Ensure the modem is not locked to a specific provider. If it is, contact your provider to unlock it or use an unlocked modem.
- 7. Perform a factory reset on the modem if needed. Reconnect your devices using the default login credentials, which are typically found on the modem label.
- 8. Open a web browser and enter the modem's default IP address to configure the modem for IPoE set-up.


How Do You Log Into Your D-Link Modem?

Different D-Link GUIs

New Interface


To access the modem interface, please make sure your device is connected to your D-Link modem through a wired or wireless connection.

Open a web browser and enter http://192.168.1.1 in the address bar.

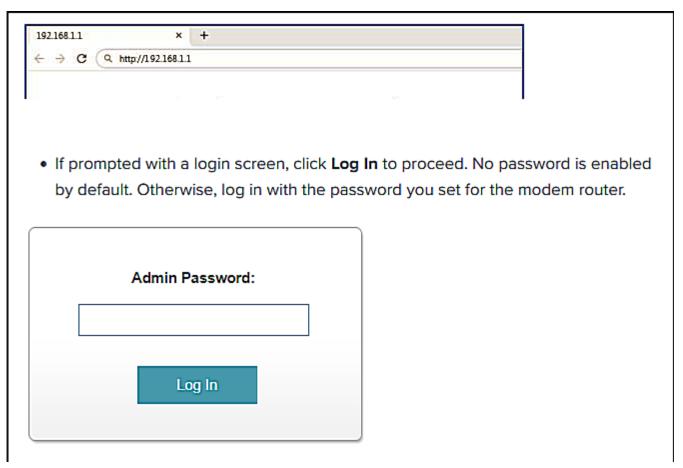


If the IP address does not work, please check the label attached to the back of the modem/router. Else, check your router's IP address. For instructions, click here.

Once logged in, the Setup Wizard shows up, click Next to continue

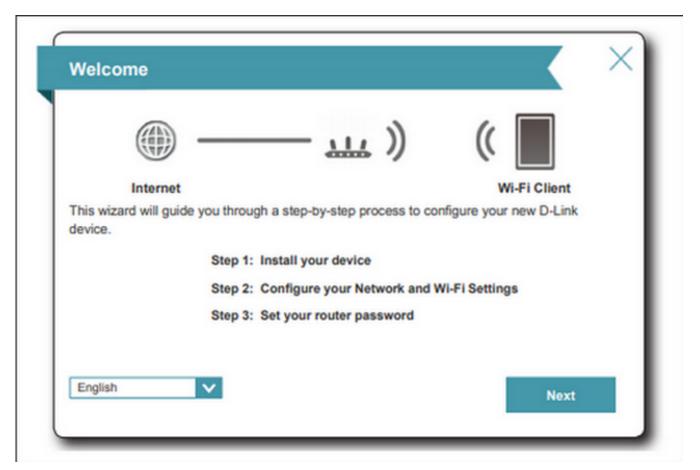


If the router does not detect a valid Internet connection, a list of connection types to choose from will be displayed. Choose Dynamic IP Address.

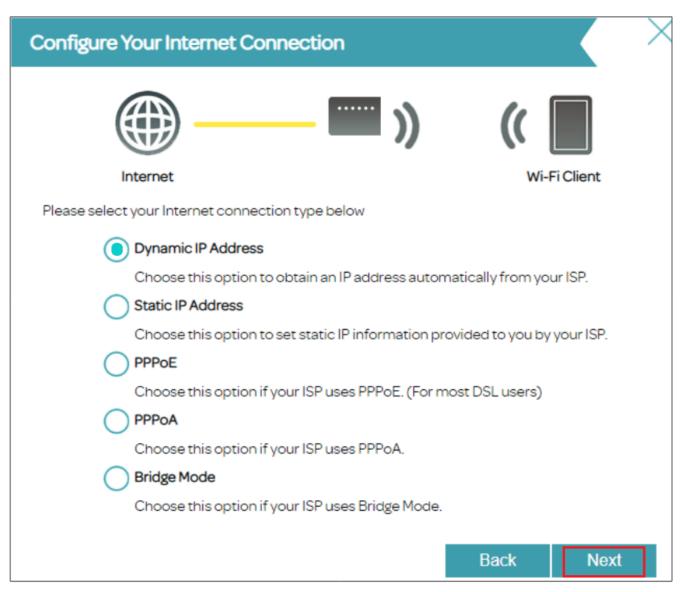


Personalise your WiFi credentials and click on Next.

Wi-Fi Settings			×
-	<u>))</u>		
Internet		Wi-Fi Client	
To setup a Wi-Fi Network you	will need to give your Wi-Fi Netv	vork a Name (SSID) and Passwor	rd.
2.4GHz SSID:			
Wireless Password:			
5GHz SSID:			
Wireless Password:			
,		_	
		Back Next	

In order to help protect your router from unauthorised users, please enter a new password. You will be prompted for this password every time you want to use the router's web configuration utility. Click Next to continue.

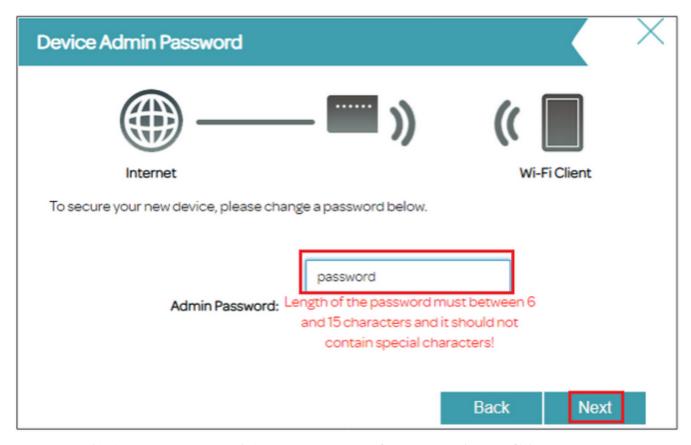


- 6. You will be presented with a summary of your settings. Click **Next** to finalize the settings. At the end of the wizard, you will be presented with a final summary of your settings.
- 7. Click **Finish** to close the wizard. The device will then reboot.

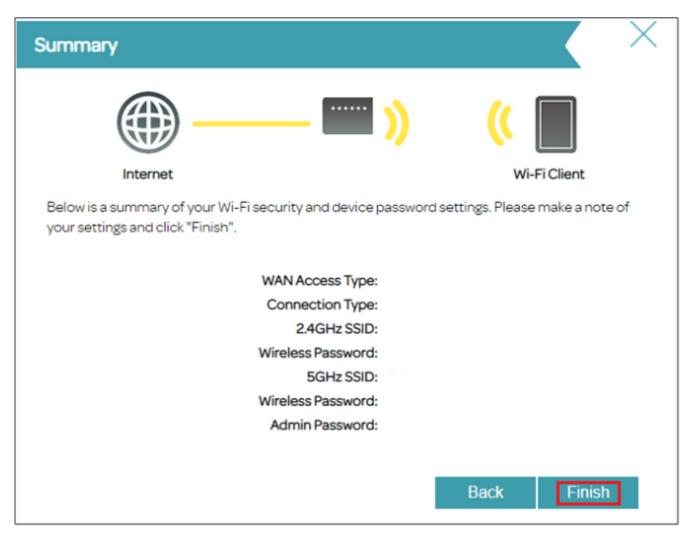

Wait **3-5 minutes** for the modem to go online, then test the service.


If your modem has any existing profiles configured, make sure to delete them to avoid double authentication or connection issues. You can usually find these profiles in your modem's settings under sections like 'Internet Settings,' 'WAN Setup,' or 'PPP Connections

 • Old Interface





D-Link

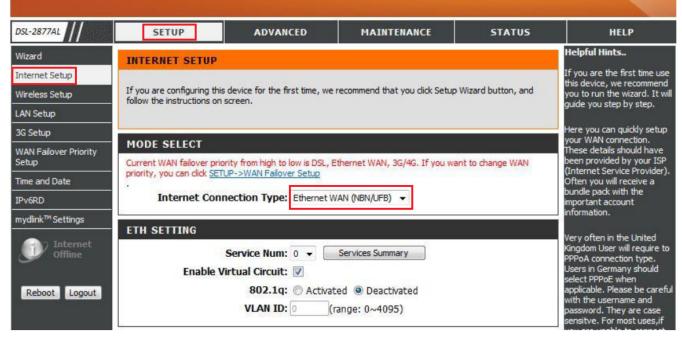

WAN SETTINGS

Configure your DSL connection here. Please consider the information of your provider on the settings otherwise it may not be possible to establish a connection.

Dynamic IP Address
 Choose this option to obtain an IP address automatically from

your ISP. (For most Cable modem users)

Static IP Address
Choose this option to set static IP information provided to you

by your ISP.

PPPoA/PPPoE
Choose this option if your ISP uses PPPoE. (For most DSL

users)

Bridge Mode Choose this option if your ISP uses Bridge.

WAN

MTU: 1500 (0:default)


Default Route: 🔽

NAT Enable: V

Enable PPPoE Passthrough:

IGMP Proxy:

Advanced Settings (if prompted):

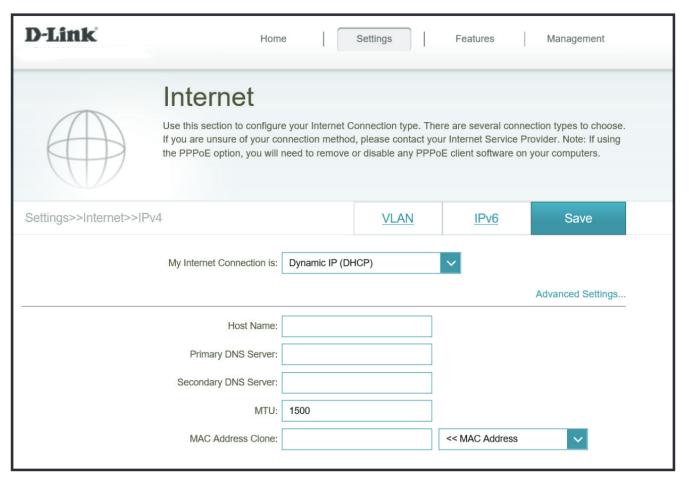

- Host Name Leave it blank
- Primary DNS Server Leave it blank
- Secondary DNS Server Leave it blank
- MTU Maximum Transmission Unit Accept default value
- MAC Address Clone The default MAC address is set to the Internet port's physical interface MAC address on the router. Leave it blank if the system permits. If it doesn't, copy the MAC address from the sticker on the router.

Setting up your Home Phone

If your order includes a Home Phone service, you'll need to complete the setup. This quick and easy <u>guide</u> will walk you through the process of setting up your home phone using a BYO modem.

Online URL:

https://articles.spintel.net.au/article/configuring-d-link-modem-for-spintel-nbn.html