How to Get the SIM Card Number From Your Phone Settings

A <u>SIM card</u> is an essential component of a mobile phone that stores important information such as your phone number, contacts, and other data.

Whether you're troubleshooting a problem or simply need to know your SIM card number, these steps should help you retrieve the information without ejecting it from your phone.

Checking the SIM Card Number Through Phone Settings

For Android Phones:

1. Open the "Settings" app on your Android device.



2. Scroll down to "About phone" or "About Device" and select it.



\equiv Phone status
System Update
Status Phone number, signal, etc.
Legal information
4. Look for "SIM card status."

SIM status

5. Your SIM card number should be listed under "ICCID" or "SIM card number."

For iPhones:

1. Open the "Settings" app on your iPhone.



2. Tap on "General."



3. Select "About."

Settings General	
About	>
Software Update	>
AirDrop	>
AirPlay & Handoff	>
CarPlay	>
Home Button	>

4. Look for "ICCID" or "SIM card number."

〈 General About	
Available	92.66 GB
Network Provider	
Wi-Fi Address	
Bluetooth	:
IMEI	
ICCID	
Modem Firmware	1.10.10

5. Your SIM card number should be listed beside the respective label.

Online URL: <u>https://articles.spintel.net.au/article/how-to-get-the-sim-card-number-from-your-phone-settings.html</u>