


Configuring Billion Modem for SpinTel NBN


How do you know if your Billion modem is compatible with nbn?

There are 2 different types of ports you need to check whether your modem is compatible with the type of nbn service that you have on your premise.

1. DSL port - often grey in colour, uses RJ11 cable. This is the same as the old telephone cable you would use to plug your home phone into the wall socket.

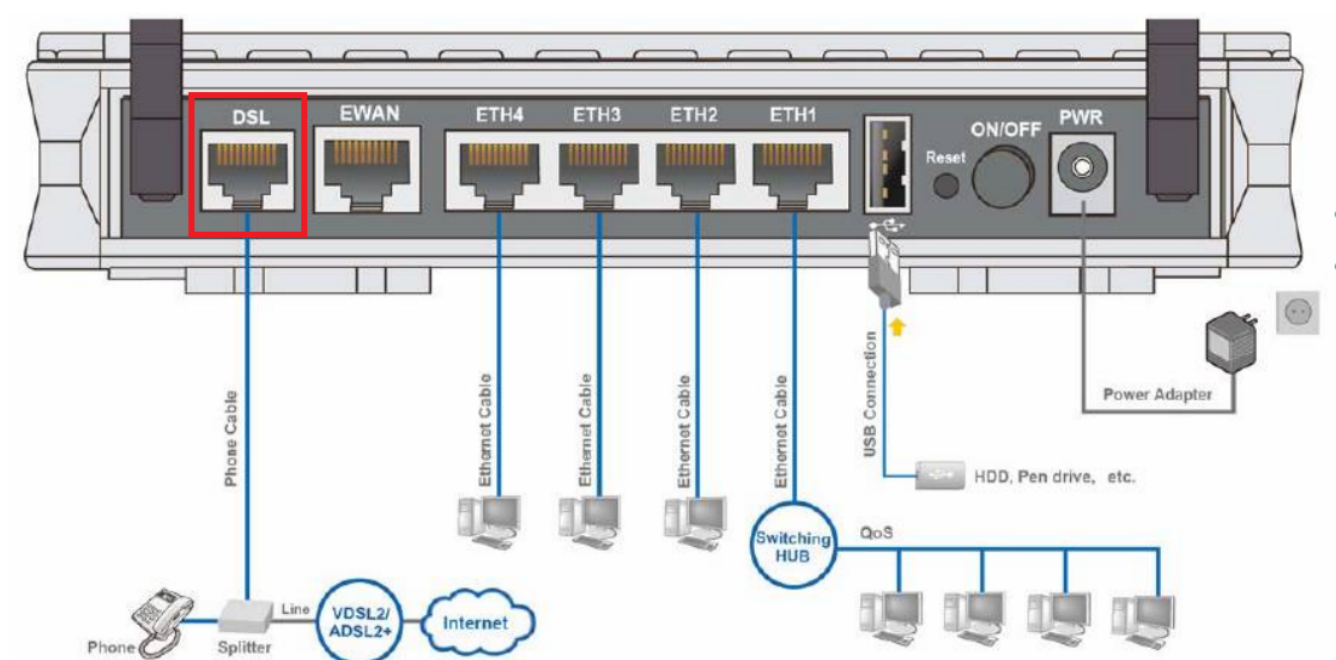

2. WAN port - Also known as the internet port that uses RJ-45 Ethernet cable to connect your Billion modem to the nbn connection device.

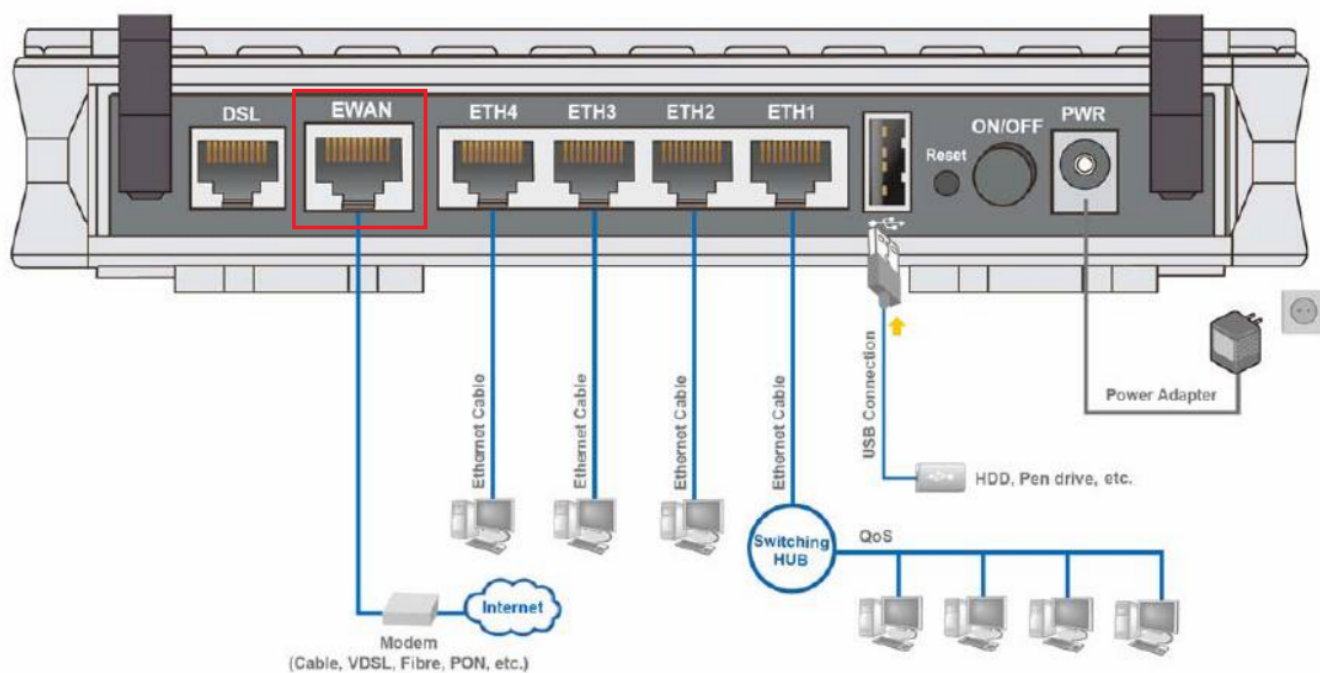

Some modems have both of these ports, and some only have one. To identify which port is required for your nbn type of service, check the table below.

NBN type	Modem connection type	Authentication
Fibre to the Premise	Router/WAN connection	IPOE/Dynamic/DHCP
Fixed Wireless	Router/WAN connection	IPOE/Dynamic/DHCP
Hybrid Fibre Coaxial	Router/WAN connection	IPOE/Dynamic/DHCP

Fibre to the Curb	Router/WAN connection	IPOE/Dynamic/DHCP
Fibre to the Node	VDSL Modem required	IPOE/Dynamic/DHCP
Fibre to the Basement	VDSL Modem required	IPOE/Dynamic/DHCP

How Do You Set up Your Billion Modem?

1. If there is **no NBN Connection Box** installed, connect the DSL port on the back of your Billion modem to your phone wall socket using a phone cable.
2. If **there is an NBN Connection Box** installed, connect to the WAN/Internet port on the back of your modem to your NBN Connection Box.
3. Connect any of the LAN ports on the back of your modem to your PC (optional)
4. Plug the NBN connection box, if there's any, to the power socket
5. Connect the power port on the back of your modem to your power socket.
6. Ensure the modem is not locked to a specific provider. If it is, contact your provider to unlock it or use an unlocked modem.
7. Perform a factory reset on the modem if needed. Reconnect your devices using the default login credentials, which are typically found on the modem label.
8. Open a web browser and enter the modem's default IP address to configure the modem for IPoE set-up.

How Do You Log Into Your Billion Modem?

To access modem gateway, enter <http://192.168.1.254> in the address bar of a web browser. If the IP address does not work or if it has been changed, check your router's IP address. For instructions, click [here](#).




Enter **admin** for both the username and password and click **OK** to login.

If you have changed the login credentials, please enter the current username and password for your modem interface.

Once you have logged on to your Billion Router via your web browser, you can begin to set it up according to your requirements. Follow the steps below to update your ISP credentials.

1. Go to **Configuration** and select **WAN**

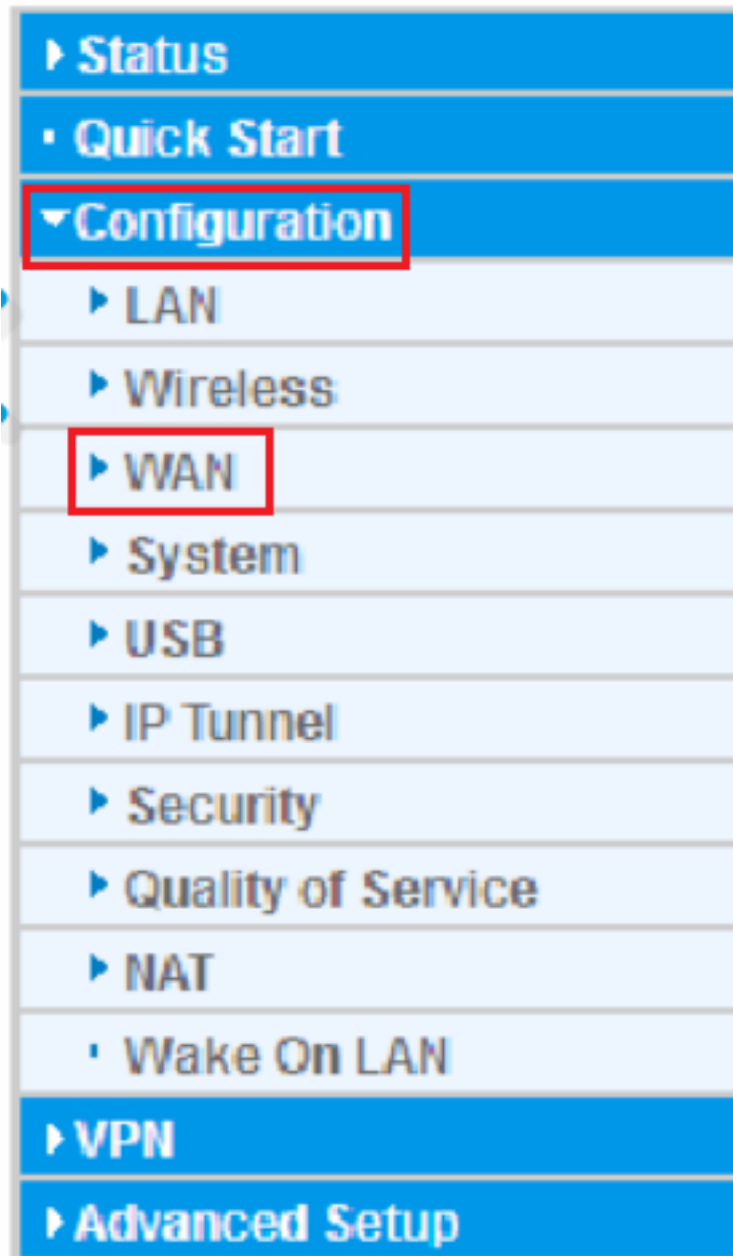

2. If your modem has any existing profiles configured, make sure to remove them to avoid double authentication or connection issues, then click **Add** to create a new WAN service



3. Select the relevant settings depending on your NBN connection type.

For FTTP, FTTC, HFC, and FW

WAN Port: **Ethernet**

Type: **IP over Ethernet**

The screenshot shows the 'Configuration' page for 'WAN Service'. The 'Parameters' section is expanded, showing various settings. The 'WAN Port' is set to 'Ethernet' and the 'Type' is set to 'IP over Ethernet'. The 'Next' button at the bottom is highlighted with a red box.

WAN Service Parameters			
WAN Port	Ethernet		
Type	IP over Ethernet		
Description			
802.1P Priority	-1 [tagged: 0-7; untagged: -1]	802.1Q VLAN ID	-1 [tagged: 0-4094; untagged: -1]
Obtain an IP address automatically	<input checked="" type="checkbox"/> Enable		
Option 60 Vendor ID			
Option 61 Client ID			
Option 125	<input checked="" type="radio"/> Disable <input type="radio"/> Enable		
WAN IP Address			
WAN Subnet Mask			
WAN gateway IP Address			
IPv6 for this service	<input checked="" type="checkbox"/> Enable		
Obtain an IPv6 address automatically	<input checked="" type="checkbox"/> Enable		
WAN IPv6 Address/Prefix Length			
WAN Next-Hop IPv6 Address			
NAT	<input checked="" type="checkbox"/> Enable	Fullcone NAT	<input type="checkbox"/> Enable
Firewall	<input checked="" type="checkbox"/> Enable		
IGMP Multicast Proxy	<input type="checkbox"/> Enable	IGMP Multicast Source	<input type="checkbox"/> Enable
No Multicast VLAN Filter	<input type="checkbox"/> Enable		
MLD Multicast Proxy	<input type="checkbox"/> Enable	MLD Multicast Source	<input type="checkbox"/> Enable
MTU	1500	MAC Spoofing	
<input type="button" value="Next"/>			

For FTTN/FTTB

WAN Port: **DSL**

Layer2 Interface: **PTM**

Type: IP over **Ethernet**

Configuration

WAN Service

Parameters

WAN Port	DSL			
Layer2 Interface	<input type="radio"/> ATM <input checked="" type="radio"/> PTM			
Type	IP over Ethernet			
VPI / VCI	0	[0-255] / 35	[32-65535]	Encapsulation Mode: LLC/SNAP-BRIDGING
Description				
802.1P Priority	-1	[tagged: 0-7; untagged: -1]	802.1Q VLAN ID	-1 [tagged: 0-4094; untagged: -1]
Obtain an IP address automatically	<input checked="" type="checkbox"/> Enable			
Option 60 Vendor ID				
Option 61 Client ID				
Option 125	<input checked="" type="radio"/> Disable <input type="radio"/> Enable			
WAN IP Address				
WAN Subnet Mask				
WAN gateway IP Address				
IPv6 for this service	<input checked="" type="checkbox"/> Enable			
Obtain an IPv6 address automatically	<input checked="" type="checkbox"/> Enable			
WAN IPv6 Address/Prefix Length				
WAN Next-Hop IPv6 Address				
NAT	<input checked="" type="checkbox"/> Enable	Fullcone NAT	<input type="checkbox"/> Enable	
Firewall	<input checked="" type="checkbox"/> Enable			
IGMP Multicast Proxy	<input type="checkbox"/> Enable	IGMP Multicast Source	<input type="checkbox"/> Enable	
No Multicast VLAN Filter	<input type="checkbox"/> Enable			
MLD Multicast Proxy	<input type="checkbox"/> Enable	MLD Multicast Source	<input type="checkbox"/> Enable	
MTU	1500	MAC Spoofing		
Next				

4. Leave the other settings to their default values and click **Next** to proceed to configure the wireless settings.

5. Once done, click **Continue** to apply. A success page will appear, and you're all set!

Wait 3-5 minutes for the modem to go online, then test the service. Reboot the modem if needed.

Online URL:

<https://articles.spintel.net.au/article/configuring-billion-modem-for-spintel-nbn.html>