

Configuring Netgear Modem for SpinTel NBN


How do you know if your Netgear modem is compatible with nbn?

There are 2 different types of ports you need to check whether your modem is compatible with the type of nbn service that you have on your premise.

1. **DSL port** - often grey in colour, uses RJ11 cable. This is the same as the old telephone cable you would use to plug your home phone into the wall socket.



2. **WAN port** - Also known as the internet port that uses RJ-45 Ethernet cable to connect your Netgear modem to the nbn connection device.

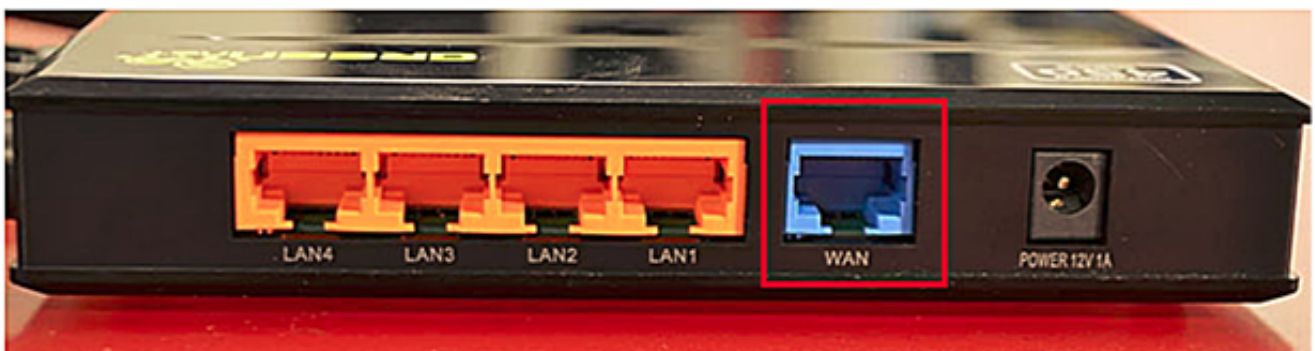

Some modems have both of these ports, and some only have one. To identify which port is required for your nbn type of service, check the table below.

NBN type	Modem connection type	Authentication
Fibre to the Premise	Router/WAN connection	IPOE/Dynamic/DHCP
Fixed Wireless	Router/WAN connection	IPOE/Dynamic/DHCP
Hybrid Fibre Coaxial	Router/WAN connection	IPOE/Dynamic/DHCP
Fibre to the Curb	Router/WAN connection	IPOE/Dynamic/DHCP
Fibre to the Node	VDSL Modem required	IPOE/Dynamic/DHCP
Fibre to the Basement	VDSL Modem required	IPOE/Dynamic/DHCP

How Do You Set up Your Netgear Modem?

1. If there is **no NBN Connection Box** installed, connect the DSL port on the back of your Netgear modem to your phone wall socket using a phone cable.
2. If **there is an NBN Connection Box** installed, connect to the WAN/Internet port on the back of your modem to your NBN Connection Box.
3. Connect any of the LAN ports on the back of your modem to your PC (optional)
4. Plug the NBN connection box, if there's any, to the power socket

5. Connect the power port on the back of your modem to your power socket.
6. Ensure the modem is not locked to a specific provider. If it is, contact your provider to unlock it or use an unlocked modem.
7. Perform a factory reset on the modem if needed. Reconnect your devices using the default login credentials, which are typically found on the modem label.
8. Open a web browser and enter the modem's default IP address to configure the modem for IPoE set-up.

How Do You Log Into Your Netgear Modem?

To access the modem interface, please make sure your device is connected to your Netgear modem through a wired or wireless connection.

Type **<http://www.routerlogin.net>** or **<http://www.routerlogin.com>**.

If the IP address does not work, please check the label attached to the back of the modem/router. Else, check your router's IP address. For instructions, click [here](#).

1. login screen displays. Enter the router user name and password. The user name is **admin**. The default password is **password**.

If you have changed the login credentials, please enter the current username and password for your modem interface.

Username:

Password:

Login

How Do You Configure Your Netgear Modem?

1. From the navigation panel, go to the **Basic** tab
2. Click **Internet** on the left-hand panel
3. Select **No** on "Does your Internet connection require a login?"
4. Leave any other settings to their default.
5. Click **Apply** to update the settings.

NETGEAR genie

Logout

Firmware Version

English

BASIC ADVANCED

Home

Internet

Wireless

Attached Devices

Parental Controls

ReadySHARE

Guest Network

Apply Cancel Test

Does your Internet connection require a login?

☐ Yes

☒ No

Account Name (If Required)

Domain Name (If Required)

Internet IP Address

☒ Get Dynamically from ISP

☐ Use Static IP Address

IP Address

IP Subnet Mask

Gateway IP Address

Domain Name Server (DNS) Address

☒ Get Automatically from ISP

☐ Use These DNS Servers

Primary DNS

Secondary DNS

206 . 132 . 59 . 76

255 . 255 . 255 . 128

206 . 132 . 59 . 1

0 . 0 . 0 . 0

. . . .

Wait **3-5 minutes** for the modem to go online, then test the service. Reboot modem if needed.

If you are still unable to connect, you may try the following:

1 Go to the **Advance** tab

2 Select **Setup** on the left-hand panel

3 Select **Internet Setup**

4 Select **No** on "Does your Internet connection require a login?"

5 Leave any other settings to their default.

6 Click **Apply** to update the settings.

NETGEAR® genie™

Logout

Firmware Version

English

BASIC **ADVANCED**

ADVANCED Home

Setup Wizard

WPS Wizard

Setup

Internet Setup

Wireless Setup

WAN Setup

LAN Setup

GoS Setup

Guest Network

USB Storage

Security

Administration

Advanced Setup

Internet Setup

Apply Cancel Test

Does your Internet connection require a login?

☐ Yes

☒ No

Account Name (If Required)

Domain Name (If Required)

Internet IP Address

☒ Get Dynamically from ISP

☐ Use Static IP Address

IP Address

206 . 132 . 59 . 76

IP Subnet Mask

255 . 255 . 255 . 128

Gateway IP Address

206 . 132 . 59 . 1

Domain Name Server (DNS) Address

☒ Get Automatically from ISP

☐ Use These DNS Servers

Primary DNS

0 . 0 . 0 . 0

Secondary DNS

. . . .

Wait **3-5 minutes** for the modem to go online, then test the service.

If your modem has any existing profiles configured, make sure to delete them to avoid double authentication or connection issues. You can usually find these profiles in your modem's settings under sections like 'Internet Settings,' 'WAN Setup,' or 'PPP Connections.'

Have a Home Phone included in your service package? Follow this [guide](#) to set up your Home Phone using your BYO modem.

Online URL:

<https://articles.spintel.net.au/article/configuring-netgear-modem-for-spintel->

[nbn.html](#)