

Configuring Linksys Modem for SpinTel NBN


How do you know if your Linksys modem is compatible with nbn?

There are 2 different types of ports you need to check whether your modem is compatible with the type of nbn service that you have on your premise.

1. DSL port - often grey in colour, uses RJ11 cable. This is the same as the old telephone cable you would use to plug your home phone into the wall socket.



2. WAN port - Also known as the internet port that uses RJ-45 Ethernet cable to connect your Linksys modem to the nbn connection device.

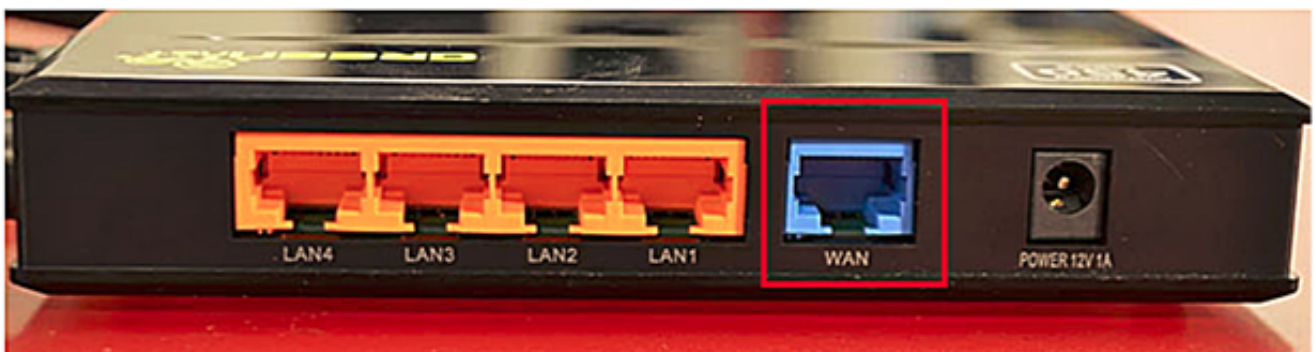

Some modems have both of these ports, and some only have one. To identify which port is

required for your nbn type of service, check the table below.

NBN type	Modem connection type	Authentication
Fibre to the Premise	Router/WAN connection	IPOE/Dynamic/DHCP
Fixed Wireless	Router/WAN connection	IPOE/Dynamic/DHCP
Hybrid Fibre Coaxial	Router/WAN connection	IPOE/Dynamic/DHCP
Fibre to the Curb	Router/WAN connection	IPOE/Dynamic/DHCP
Fibre to the Node	VDSL Modem required	IPOE/Dynamic/DHCP
Fibre to the Basement	VDSL Modem required	IPOE/Dynamic/DHCP

How Do You Set up Your Linksys Modem?

1. If there is **no NBN Connection Box** installed, connect the DSL port on the back of your Linksys modem to your phone wall socket using a phone cable.
2. If **there is an NBN Connection Box** installed, connect to the WAN/Internet port on the back of your modem to your NBN Connection Box.
3. Connect any of the LAN ports on the back of your modem to your PC (optional)
4. Plug the NBN connection box, if there's any, to the power socket.
5. Connect the power port on the back of your modem to your power socket.
6. Ensure the modem is not locked to a specific provider. If it is, contact your provider to unlock it or use an unlocked modem.
7. Perform a factory reset on the modem if needed. Reconnect your devices using the default login credentials, which are typically found on the modem label.
8. Open a web browser and enter the modem's default IP address to configure the modem.

How Do You Log Into Your Linksys Modem?

To access the modem interface, please make sure your device is connected to your Linksys modem through a wired or wireless connection.

From your browser, type in **168.1.1** in the address bar and hit Enter.

If the IP address does not work, please check the label attached to the back of the modem/router. Else, check your router's IP address. For instructions, click [here](#).

Enter **admin** in the username field and **password** in the password field. Otherwise, log in with the account you set for the modem router.

How Do You Configure Your Linksys Modem?

For Newer Linksys Version

Once logged in, you will be routed to the Home page.

Go to **Connectivity**

Click **Internet Settings**

Choose **Automatic Configuration – DHCP** on Connection Type

Click on **Apply** to save changes

Smart Wi-Fi Tools

- Network Map
- Guest Access
- Parental Controls
- Media Prioritization
- Speed Test
- External Storage

Router Settings

- Connectivity**
- Troubleshooting
- Wireless
- Security

Network Status

Connected

THIS DEVICE ROUTER INTERNET

Linksys Home Networking

Learn more about apps for Linksys Smart Wi-Fi Routers

Network Map

Online devices:

Local	2	2.4 GHz	1
		5 GHz	0

+ Add a Device

Guest Access

Guest Network is OFF: OFF

2.4 GHz SSID: EA9500-guest
5 GHz SSID: EA9500-guest_5GHz
Password: BeMyGuest
Currently: 1 guest

Parental Controls

Parental Controls are OFF: OFF

Controlled devices: None

Media Prioritization

Media Prioritization is Off

Prioritize devices

Connectivity

View and change router settings

- Basic
- Internet Settings**
- Local Network
- Advanced Routing
- VLAN
- Administration

IPv4 | IPv6

Type of Internet Connection | Edit

Connection Type: **Automatic Configuration - DHCP**

Optional

Domain name:

MTU: Auto

Size: 0

MAC Address Clone Enabled

00 : 00 : 00 : 00 : 00 : 00

Clone my PC's MAC

Ok

Cancel

Apply

For Older Linksys Version

FTTN/FTTB

Go to **Setup > Basic Setup**

Choose **DSL** on Physical Type

Choose **PTM** on DSL Mode

Select **IPoE** on Internet Connection Type

Choose **Automatically Obtain an IP address** on IP Settings

Then click **Apply**

LINKSYS Firmware Version: v1.0.00 (014)

Linksys X6200 X6200

Basic Setup | [Setup](#) | [Quick Start](#) | [Wireless](#) | [Security](#) | [Storage](#) | [Access Policy](#) | [Application & Gaming](#) | [Administration](#) | [Status](#)

[Basic Setup](#) | [IPv6 Setup](#) | [DDNS](#) | [MAC Address Clone](#) | [Advanced Routing](#)

Language
Select your language: English

Physical Setting
Physical Type: DSL Ethernet

DSL Mode: ATM PTM

VDSL2 Profiles: Auto

Enable VLAN:

VLAN ID:

Internet Setup
Internet Connection Type: IPoE

IP Settings: Automatically obtain an IP address Use the following IP address

Optional Settings (required by some Internet Service Providers):
Host Name:
Domain Name:
MTU: Auto Size:

[Help...](#)

For FTTP, FTTC, HFC, FW

- 1 Go to **Setup > Basic Setup**
- 2 Choose **Ethernet** on Physical Type
- 3 Select **DHCP** on Internet Connection Type
- 4 Then hit **Apply**

LINKSYS Firmware Version: v1.0.00 (014)

Linksys X6200 X6200

Basic Setup

Setup | Quick Start | Wireless | Security | Storage | Access Policy | Application & Gaming | Administration | Status

Basic Setup | IPv6 Setup | DDNS | MAC Address Clone | Advanced Routing

Language
Select your language: English

Physical Setting
Physical Type: DSL Ethernet

Enable VLAN:
VLAN ID: 0

Internet Setup
Internet Connection Type: DHCP

Optional Settings (required by some Internet Service Providers)

Host Name: LINKSYS00048
Domain Name:
MTU: Auto Size: 1500

Network Setup
Router Address
IP Address: 192 . 168 . 1 . 1
Subnet Mask: 255.255.255.0
Device Name: LINKSYSX6200

[Help...](#)

Wait **3-5 minutes** for the modem to go online, then test the service. Reboot modem if needed.

Online URL:

<https://articles.spintel.net.au/article/configuring-linksys-modem-for-spintel-nbn.html>