

Configuring ZTE Modem for SpinTel NBN


How do you know if your ZTE modem is compatible with nbn?

There are 2 different types of ports you need to check whether your modem is compatible with the type of nbn service that you have on your premise.

1. DSL port - often grey in colour, uses RJ11 cable. This is the same as the old telephone cable you would use to plug your home phone into the wall socket.



2. WAN port - Also known as the internet port that uses RJ-45 Ethernet cable to connect your ZTE modem to the nbn connection device.

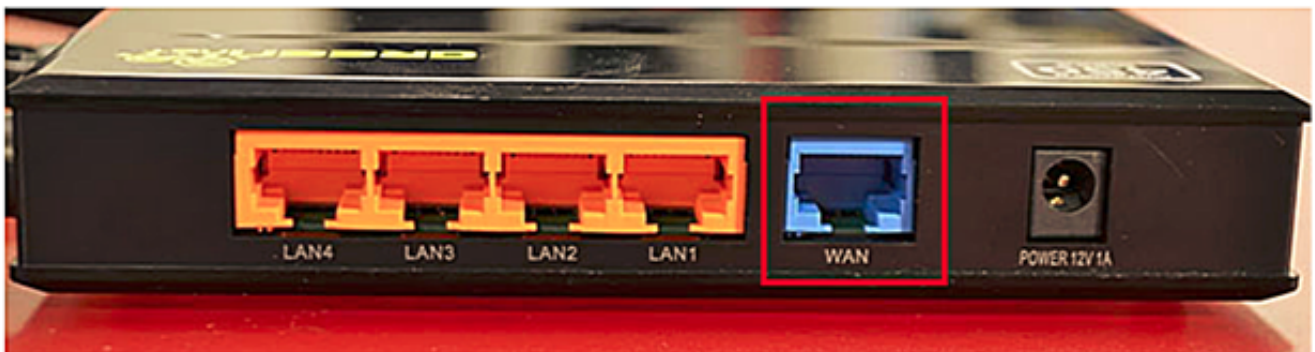

Some modems have both of these ports, and some only have one. To identify which port is required for

your nbn type of service, check the table below.

NBN type	Modem connection type	Authentication
Fibre to the Premise	Router/WAN connection	IPOE/Dynamic/DHCP/Autom
Fixed Wireless	Router/WAN connection	IPOE/Dynamic/DHCP/Autom
Hybrid Fibre Coaxial	Router/WAN connection	IPOE/Dynamic/DHCP/Autom
Fibre to the Curb	Router/WAN connection	IPOE/Dynamic/DHCP/Autom
Fibre to the Node	VDSL Modem required	IPOE/Dynamic/DHCP/Autom
Fibre to the Basement	VDSL Modem required	IPOE/Dynamic/DHCP/Autom

How do you set up your ZTE modem?

1. If there is **no NBN Connection Box** installed, connect the DSL port on the back of your ZTE modem to your phone wall socket using a phone cable.
2. If **there is an NBN Connection Box** installed, connect to the WAN/Internet port on the back of your modem to your NBN Connection Box.
3. Connect any of the LAN ports on the back of your modem to your PC (optional)
4. Plug the NBN connection box, if there's any, to the power socket
5. Connect the power port on the back of your modem to your power socket.
6. Ensure the modem is not locked to a specific provider. If it is, contact

your provider to unlock it or use an unlocked modem.

7. Perform a factory reset on the modem if needed. Reconnect your devices using the default login credentials, which are typically found on the modem label.
8. Open a web browser and enter the modem's default IP address to configure the modem.

How do you log in to your ZTE modem?

To access the modem interface, please make sure your device is connected to your ZTE modem through a wired or wireless connection.

1. Enter **192.168.20.1** the address bar of a web browser.

If the IP address does not work, please check the label attached to the back of the modem/router. Else, check your router's IP address. For instructions, click [here](#).

2. Enter **admin** for both the username and password and click Login. If you have changed the login credentials, please enter the current username and password for your modem interface.

How do you configure your ZTE modem?

Once logged in, you will have several options listed at the top of the page.

1. Click '**Internet**'. You will see several options listed on the left side of the page.
2. Click '**WAN**'. You will then see 3 tabs at the top of the page – DSL, Ethernet & 3G.

3. Select the appropriate one for your premises NBN connection type

- Click '**Ethernet**' for FTTP/HFC/FTTC/Fixed Wireless NBN connection types
- Click '**DSL**' for FTTN or FTTB NBN connection types

4. Delete any existing settings/profile by clicking the trash icon.

5. Click '**Create New Item**'.

6. Add **SpinTel** on the Connection Name, else **Other**

7. Accept default values and make sure the Link Type is **IP over Ethernet / Dynamic / Automatic / DHCP**

Note: For **Service List**, select INTERNET and VOIP if you have a home phone, otherwise, just select Internet if you don't have one.

For FTTN/FTTB, the DSL Transfer Type should be **PTM**.

8. Hit **Apply**

For FTTP, FTTC, HFC, FW

The screenshot shows the ZTE web interface. At the top left is the ZTE logo. To its right is the current time: 1970-01-01T00:04. On the far right are the user 'admin' and a 'Logout' link. Below this is a navigation bar with 'Home', 'Internet', 'Local Network', 'VoIP', and 'Management & Diagnosis'. The 'Internet' tab is selected and highlighted with a red box and a blue circle '1'. Below the navigation bar is a sub-menu with 'Status', 'DSL', 'Ethernet', and '3G'. The 'Ethernet' tab is selected and highlighted with a red box and a blue circle '3'. On the left side, there is a sidebar menu with 'Status', 'WAN', 'QoS', 'Security', 'DDNS', 'SNTP', and 'Multicast'. The 'WAN' item is highlighted with a red box and a blue circle '2'. The main content area is titled 'Page Information' and contains the text: 'This page provides the function of Ethernet connection parameter(s) configuration.' Below this is a section titled 'Ethernet Connection' with a dropdown arrow. Underneath, there is a list of items: 'Exetel_EthWAN' and a '+ Create New Item' button. The 'Exetel_EthWAN' item is highlighted with a red box and a blue circle '5'. To the right of the 'Exetel_EthWAN' item is a trash icon, which is highlighted with a red box and a blue circle '4'. The '+ Create New Item' button is also highlighted with a red box and a blue circle '5'.

For FTTN/FTTB

The screenshot shows the ZTE web interface. At the top left is the ZTE logo. To its right is the current time: 1970-01-01T00:03. On the far right are the user 'admin' and a 'Logout' link. Below this is a navigation bar with 'Home', 'Internet', 'Local Network', 'VoIP', and 'Management & Diagnosis'. The 'Internet' tab is selected and highlighted with a red box and a blue circle '1'. Below the navigation bar is a sub-menu with 'DSL', 'Ethernet', and '3G'. The 'DSL' tab is selected and highlighted with a red box and a blue circle '3'. On the left side, there is a sidebar menu with 'Status', 'WAN', 'QoS', 'Security', 'DDNS', 'SNTP', and 'Multicast'. The 'WAN' item is highlighted with a red box and a blue circle '2'. The main content area is titled 'Page Information' and contains the text: 'This page provides the function of DSL connection parameter(s) configuration.' Below this is a section titled 'DSL Connection' with a dropdown arrow. Underneath, there is a link: 'What should be noticed when configuring DSL connection?'. Below the link is a list of items: 'Exetel_VDSL', 'Exetel_ADSL', and a '+ Create New Item' button. The 'Exetel_VDSL' item is highlighted with a red box and a blue circle '4'. The 'Exetel_ADSL' item is highlighted with a red box and a blue circle '5'. The '+ Create New Item' button is also highlighted with a red box and a blue circle '5'. To the right of the 'Exetel_VDSL' and 'Exetel_ADSL' items are trash icons, which are highlighted with a red box and a blue circle '4'. Below the list is a section titled 'DSL Modulation Parameters' with a dropdown arrow.

Wait **3-5 minutes** for the modem to go online, then test the service.

Got a Home Phone included in your service package? Follow this [guide](#) to set up your Home Phone using your BYO modem.

Online URL:

<https://articles.spintel.net.au/article/configuring-zte-modem-for-spintel-nbn.html>